



la marzocco

handmade in florence

La Marzocco Technical Bulletin #111

GB5 Firmware Updates

We are pleased to announce the following updates to GB5 firmware.

GB5 AV firmware Lily_136:

The preset configuration has been modified:

- Hot water dispensing - with pump.
- Steam boiler heating - by temperature probe.
- Cup-heater timing: 3 min ON + 10 min OFF + 3 min at machine starting.
- Cup-heater ON-OFF: it is possible to switch on-off the cup-heater by pressing the on/off button for 3 seconds (push the button for more than 3 seconds to turn off the machine)
- Cup-heater LED: the ON/OFF LED is used to show the cup heating. When the machine is on -> LED is on if cup heating is enabled, LED is off if cup heating is disabled. When the machine is off -> LED blinks 0.5 seconds on and 1.5 seconds off.
- The pre-set working temperatures of coffee and steam boilers have been changed to 94.5°C for coffee boiler and 123.0°C for steam boiler.

GB5 EE firmware LilyMan_121:

The preset configuration has been modified:

- Hot water dispensing - with pump.
- Steam boiler heating - by temperature probe.
- Cup-heater timing: 3 min ON + 10 min OFF + 3 min at machine starting.
- Cup-heater ON/OFF: the barista is allowed to switch on and off the cup heating if cup heating is enabled.
- The pre-set working temperatures of coffee and steam boilers have been changed to 94.5°C for coffee boiler and 123.0°C for steam boiler.

GB5 EE independent boilers LilyMan_3Caf_102:

The preset configuration has been modified:

- Hot water dispensing - with pump.
- Steam boiler heating - by temperature probe.
- Cup-heater timing: 3 min ON + 10 min OFF + 3 min at machine starting.
- Cup-heater ON/OFF: the barista is allowed to switch on and off the cup heating if cup heating is enabled.
- The pre-set working temperatures of coffee and steam boilers have been changed to 94.5°C for coffee boiler and 123.0°C for steam boiler.

GB5 AV independent boilers LilyGB5_3Caf_104:

The preset configuration has been modified:

- Hot water dispensing - with pump.
- Steam boiler heating - by temperature probe.
- Cup-heater timing: 3 min ON + 10 min OFF + 3 min at machine starting.
- Cup-heater ON-OFF: it is possible to switch on-off the cup-heater by pressing the on/off button for 3 seconds (push the button for more than 3 seconds to turn off the machine)



la marzocco

handmade in florence

- Cup-heater LED: the ON/OFF LED is used to show the cup heating. When the machine is on -> LED is on if cup heating is enabled, LED is off if cup heating is disabled. When the machine is off -> LED blinks 0.5 seconds on and 1.5 seconds off.
- The pre-set working temperatures of coffee and steam boilers have been changed to 94.5°C for coffee boiler and 123.0°C for steam boiler.

GB5 AV and EE, starting from SN **GB013630**, will be released with new firmware.

We recommend to update all machines to the latest firmware. In order to find the updating procedures please consult the Solutions Team (solutions@lamarzocco.com).