

# manual

strada s



**la marzocco**  
handmade in florence

# strada s

Operating Manual V1.0 - 05/2023  
MAN.32.1

## Chapters

1. General Warnings and Safety Specifications	page 3
2. Definition of Available Models	page 8
3. Installation	page 11
4. Machine Operation and Coffee Preparation	page 19
5. Dispensing Steam and Hot Water	page 22
6. Maintenance and Periodic Cleaning Operations	page 23
7. De-commissioning and Demolition	page 25
8. Mandatory Maintenance and Check-up Operations	page 26
9. Precision Scale	page 27
10. Software Programming Guide	page 30



**la marzocco**

handmade in florence

La Marzocco S.r.l.

Via La Torre 14/H  
Località La Torre  
50038 Scarperia e San Piero  
(Firenze) - ITALIA

[www.lamarzocco.com](http://www.lamarzocco.com)  
[info@lamarzocco.com](mailto:info@lamarzocco.com)

T: +39 055 849 191  
F: +39 055 849 1990

La Marzocco USA

1553 NW Ballard Way  
Seattle, WA 98107

[www.lamarzoccousa.com](http://www.lamarzoccousa.com)  
[info.usa@lamarzocco.com](mailto:info.usa@lamarzocco.com)  
206.706.9104

certifications available:



## 1. General Warnings and Safety Specifications

### ▲ WARNING ▲

This appliance is for professional use only and should be installed in locations where its use and maintenance is restricted to trained personnel. Children are forbidden to operate or play with the appliance.

### ▲ WARNING ▲

The appliance must be placed in a horizontal position on a counter higher than 80 cm from the ground.

### ▲ WARNING ▲

This appliance is not suitable for outdoor use. Jets of water should not be used to clean the appliance, nor should it be placed where water jets are used.

### ▲ CAUTION ▲

As already mentioned in the preceding notes, the manufacturer shall not be held responsible for damage to objects, animals and/or people whenever the appliance has not been installed according to the instructions contained in this manual, and is not used to do what it was designed for (i.e. preparing coffee and hot drinks).

#### 1) Important safeguards

- Appliance weighted sound pressure level is lower than 70 dBA.
- Use, cleaning and maintenance of this appliance can be carried out by people (including children more than 8

years of age) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, as long as they have been given supervision or instructions concerning its use by a person responsible for their safety and if they understand related dangers.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of the reach of children less than 8 years of age.

2) This operating manual is an integral and essential

part of the product and must be supplied to users. Users are asked to read the enclosed warnings and cautions carefully, as they provide valuable information concerning safety during installation, operation and maintenance. This manual must be kept in a safe place and be available for consultation to new and experienced users alike.

**3)** Ensure product's integrity by inspecting the packaging, making sure it presents no signs of damage which might have affected the enclosed appliance.

**4)** Check appliance integrity after having carefully removed the packaging.

**Note: In case of doubt, do not go**

**on any further and contact your dealer or retailer immediately. They will send out specialized personnel authorized to perform service on the appliance.**

**5)** Packaging (boxes, plastic bags, foam parts and whatever else) must not be left around within easy reach of children, due to the potential danger it represents, nor be discarded in the environment.

**6)** Check to see that data on the rating plate correspond to those of the main electrical supply which the appliance will be hooked up to.

**7)** The equipment must be installed to comply with applicable federal, state or local electrical and plumbing codes. Installation also must comply with manufacturer's

instructions, and must be performed by qualified and authorized personnel.

**8)** Incorrect installation may cause injury/damages to people, animals or objects for which the manufacturer shall not be held responsible.

**9)** Safe electrical operation of this device will be achieved only when connection to the power outlet has been completed correctly and in observance of all local, national, and international electrical codes and safety regulations, and particularly by grounding the unit. Make sure grounding has been done properly as it represents a fundamental safety requirement. Ensure qualified personnel check such connection.



10) Furthermore, you must ensure that the capacity of available electrical system is suitable for the maximum power consumption indicated on the appliance.

11) We do not recommend using adapters, multiple plugs and/or extension cords. If you cannot avoid using them, make sure that they are exclusively of the kind which conforms to local, national, and international electrical codes and safety regulations, thus being careful not to exceed power and current ratings indicated on such adapters and extension cords.

12) This device must be used exclusively for the functions it has been designed and built for. Any other application is

inappropriate and dangerous.

**The manufacturer shall not be held responsible for any damages caused by improper and/or irrational use.**

This appliance should not be installed in kitchens.

13) Using any electrical device requires that certain fundamental rules be observed. In particular:

- do not touch the appliance with wet or humid hands and feet;
- do not use the appliance while having no shoes on your feet;
- do not use extension cords in bath or shower rooms;
- do not unplug the appliance from power outlet by pulling on power supply cable;
- do not expose the appliance to atmospheric agents

(rain, sun, etc.);

- do not allow children or untrained people to use this appliance;
- do not clean control panel with a wet cloth since it is not watertight.

14) Before carrying out any maintenance and/or cleaning operations, turn the main switch, which is located on the front left of the appliance, to the “O” or “OFF” position, and disconnect the appliance from electrical network by unplugging the cord or by switching off the relevant circuit breaker. For any cleaning operation, follow exclusively the instructions included in this manual.

15) In case the appliance is operating in a faulty manner

or breaks down, disconnect it from electrical network (as described in the preceding point) and close water supply valve. Do not attempt to repair it. Contact a qualified and authorized professional to perform any repair. Repairs must be performed exclusively by the manufacturer or by an authorized centre using only original parts. Non-compliance with the above could compromise appliance safe operation.

**16)** During installation, you should plan to make use of an omnipolar connector, as required by local, national, and international electrical codes and regulations.

**17)** In order to avoid dangerous overheating problems, it is

recommended that the power supply cable be fully unfurled.

**18)** Do not obstruct air intake and exhaust grilles and, in particular, do not cover the cup warmer tray with cloths or other items.

**19)** Appliance power supply cable must not be replaced by users. In case power supply cable becomes damaged, shut off the appliance and disconnect it from the electrical network by switching off the relevant circuit breaker and close off the water supply; in order to replace the power supply cord, contact qualified professionals exclusively.

**20)** These instructions are also available in an alternative format on a website: <http://techcenter.lamarzocco.com>.

com.

**21)** The appliance should be placed on a flat counter and in settings with the following temperatures:

- Minimum room temperature: 5°C/41°F;
- Maximum room temperature: 32°C/89°F.

**22)** Check your package to make sure that the following accessories are included:

- a number of 1-dose and 2-dose portafilters according to the number of groups;
- replacement 1-dose and 2-dose filter baskets
- 1 tamper
- 1 blind filter
- cleaning detergent, for the groups
- 3 stainless steel braided

hoses for water connections

- 1.5 m of reinforced plastic tubing for drainage
- 1 hose clamp

**23)** If the appliance has been temporarily housed in settings with a room temperature of less than 0°C/32°F, it must be placed in a warmer environment in order to allow hydraulic system gradual defrosting prior to use.

**24)** Water pressure supply must be between 0.4 and 0.8 MPa. The maximum inlet water pressure shall be at least 1.0 MPa (Denmark, Norway, Sweden, Finland).

**25)** This appliance is intended to be connected with a service disconnect, and it is advisable that a Ground Fault Circuit Interrupter (GFCI) with

a rated residual operating current not exceeding 6mA is installed.

**26)** This appliance is designed only for preparing coffee and hot drinks.

**27)** Any modification to the equipment is prohibited; the manufacturer cannot be held liable for damage to property, animals, and/or persons if the equipment undergoes technical and aesthetic changes, changes in performance and characteristics, and in general is tampered with in one or more of its constituent components.


**28)** Minimum requirements for WiFi connection:

- device running Android version 6+ or iOS version 10+;

- wireless network 2.4 GHz;
- La Marzocco app available at the official stores Play Store and App Store.



## 29) Common Dimensions, Weights, and Features

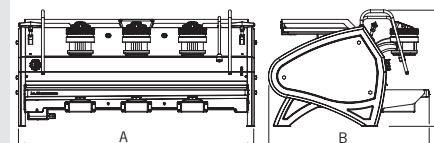


STRADA S	2 groups	3 groups
A [mm]	830	1030
B [mm]	690	690
C [mm]	500	500
WEIGHT [kg]	77	94

## 2. Definition of Available Models

**This operating manual refers exclusively to the following models, of our own manufacture:**

STRADA, model S with 2 and 3 groups

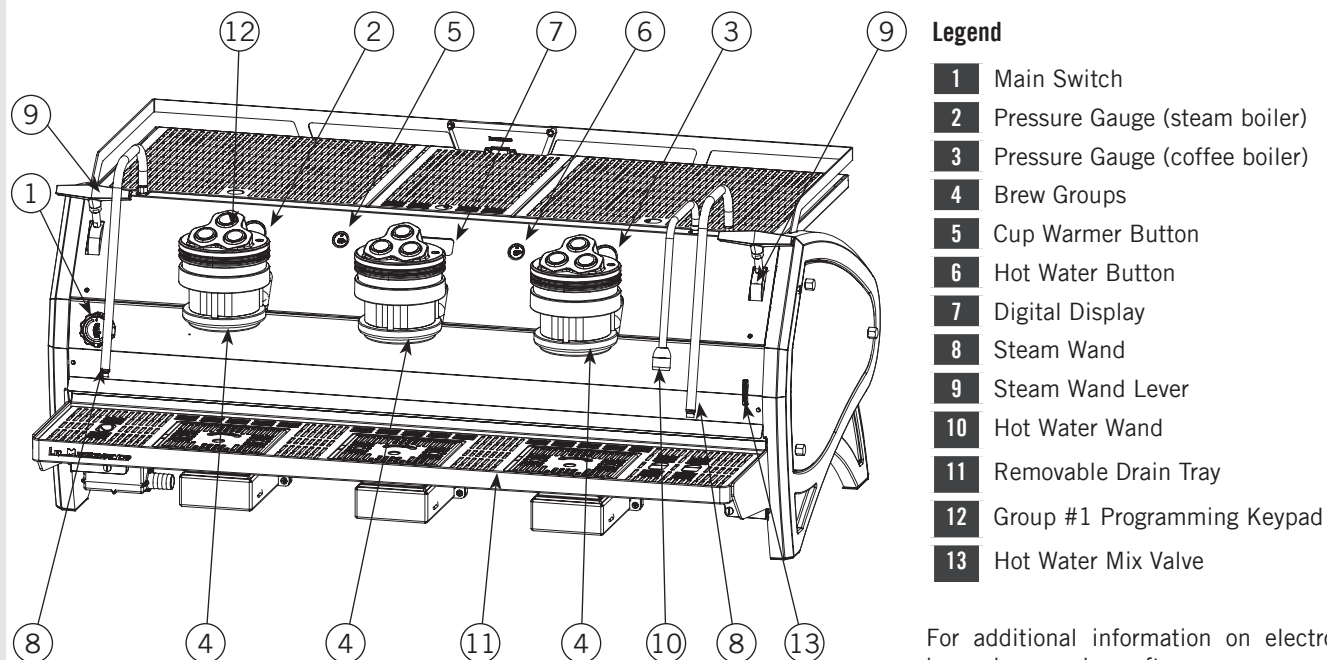

For additional information on electronics, keypads, and software programming, please see the section entitled Software Programming your Espresso Machine.

**Fig. 1 - Model S with 2 or 3 groups**

## 1) General Description

The machine is built in 2 and 3 coffee group versions and is essentially composed of the following parts:

- Steam Boiler (produces steam and hot water);
- Coffee ("saturated") boiler;
- Brewing groups;
- Exterior Cover;
- Water pump.

## 2) Description of the various parts

### • Steam Boiler

The Steam Boiler consists of a cylindrical tank, of varying length according to the number of coffee groups, which is made of AISI 300 series stainless steel. Each unit is subjected to a hydraulic test, at a pressure of 6 bar, and has an operating pressure of 1.3-1.5 bar. The following is a list of effective volumes and power ratings according to the number of groups installed:

2 groups	8,2 liters	3000 Watts
3 groups	11,8 liters	4000 Watts

Covers are welded at either end of the cylindrical tank and on one of them there is a housing for the water heating element, which allows the steam boiler to reach operating pressure within approximately 25 minutes. Operating pressure is maintained

by temperature probe and PID controller. The steam boiler has various fittings used for safety devices, for supplying hot water and steam, and for the heating element.

Composed of AISI 300 series stainless steel tube. Heating is accomplished through an immersion-type plated heating element.

- Operating pressure of 1.3-1.5 bar, controlled automatically through a pressure switch or a temperature probe, adjusted to open the heating element supply circuit at 1.5 bar and close it at 1.3 bar.
- The pressure is displayed by means of a pressure gauge with a scale of 0 to 2 bar.
- Safety device, based on an expansion type mechanical valve, with counter-acting spring adjusted to 1.8 bar.
- Testing: hydraulic test at 4.5 bar performed on ready-to-use small boilers, at our factory.

### • Coffee Boiler

The Coffee Boiler consists of a cylindrical tank made of AISI 300 series stainless steel. One each group (hot water generator for brewing coffee).

Each unit is subject to a hydraulic test, at a pressure of 18 bar, and has an operating pressure of 9 bar. The following

is a list of effective volume and power ratings according to the number of groups installed:

2 groups	2 x 1,3 liters	2 x 800 Watts
3 groups	3 x 1,3 liters	3 x 800 Watts

Covers are installed at either end of the cylindrical tank and on one of them there is housing for the water heating elements. The temperature of the coffee boiler is maintained by an electronic temperature controller (PID capable) with an accuracy of 0.2°C. The brewing groups are installed on the boiler.

Composed of an AISI 300 series stainless steel tube. Heating is accomplished through an immersion-type plated heating element.

- Operating temperature 95°C (adjustable), controlled automatically by an electronic temperature controller with an accuracy of 0.2 °C. Operating pressure of 9 bar.
- Pressure is displayed through a pressure gauge with a scale from 0 to 18 bar.
- Safety device, based on an expansion type mechanical valve, with counteracting spring adjusted to 13 bar.
- Testing: Hydraulic test at 18 bar performed on ready-to-use small boilers, at our factory.

### • Brewing groups


They consist of a precision casting made of stainless steel. The brewing group accepts the portafilter used to hold the ground coffee; the espresso flows through the brewing group, through the portafilter basket, through the portafilter spout, and into the cup(s) after the brewing button has been pressed.

### • Exterior cover

The exterior consists of painted and stainless sheet steel panels. To provide good aesthetics, to optimize ergonometics for the operator and to reduce the chance of damage to a minimum.

### • Water pump

The rotary vane pump, is installed on the water supply tubing and is set up to operate anytime the coffee groups are activated, and through an autofill system whenever the water boiler needs to be replenished.

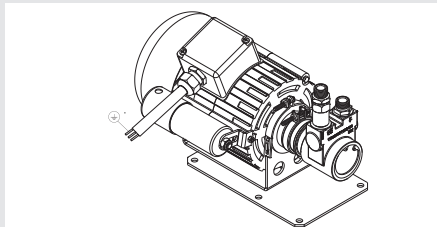

### • Water sensor (if present)

The probe that analyses the water entering the machine (AQUATOP) performs a very precise reading of the TDS and total hardness.

However, if a water softener with salt regeneration (Na + ion cationic resins) is installed upstream from the machine, this reading is not as reliable and precise.

In this case, we recommend you to consult your local technician for questions regarding water treatment.

### • FCC certification (U.S.A. and CANADA only)


The espresso machine is equipped with a dedicated radio module that meets FCC and ISCED certification requirements.

FCC ID: 2AZUJ-SYS-C60-LMC1


IC ID: 27093-SYSC60LMC1

Ethernet port is used for firmware updates and it is used only in production at LA MARZOCCO.

### • Machine CE plate:

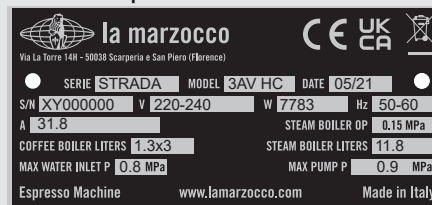

### • Machine ETL plate:

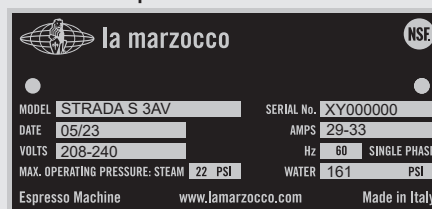

### • Machine KC plate:




### 3. Installation

MODEL/SERIES	GROUP	V/Hz	RATED POWER (W)	RATED INPUT (A)	COFFEE BOILER WATTAGE	STEAM BOILER WATTAGE	TOTAL WATTAGE	POWER CORD SIZE (mm²)
STRADA S	2GR	AC220-240V/60Hz AC208-240/60Hz AC380/50Hz	5666	24.6 21-24 10.3	1600	3000	5666	SEE ELECTRICAL CONNECTIONS FOR DETAILS
	3GR	AC220-240V/60Hz AC208-240/60Hz AC380/50Hz	7783	33.8 29-33 14.8	2400	4000	7783	

**3 X WIRES 220V**


1 X BLUE (NEUTRAL)  
1 X BROWN (PHASE)  
1 X YELLOW & GREEN (GROUND)



**POWER CORD:**

**5 X WIRES 380V**

1 X BROWN (PHASE) 1 X BLUE (NEUTRAL)  
1 X GRAY (PHASE) 1 X YELLOW & GREEN (GROUND)  
1 X BLACK (PHASE)




**WARNING**

THE DETAILS ON THE LEFT DESCRIBE HOW TO CONNECT EACH WIRE TO THE PLUG. RESPECT ALSO THE LOCAL SAFETY REGULATIONS.


  

**(ONLY FOR ETL) POWER CORD:**

**ONLY FOR 2 GROUPS: NEMA 6-30P**

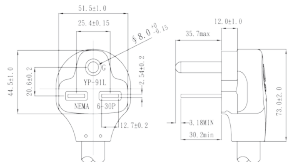

**ONLY FOR 3 GROUPS: NEMA 6-50P**

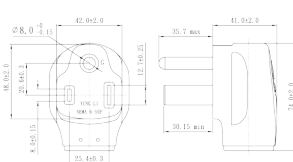

**WARNING**

The machine is intended to be connected with a service disconnect, and it is advisable that a GFCI with a rated trip threshold not exceeding 6mA is installed.

**WARNING**

The Coffee Boiler and Steam Boiler contain water at elevated temperature. Water temperature over 125°F / 52°C can cause severe burns instantly or death from scalding (Coffee Boiler 207°F/97°C - Steam Boiler 256°F / 124°C)

**WARNING**

Replace fuses with the same size, type and rating. e.g. F1 = 2A, 250V

**▲ WARNING ▲**

At each installation, the machine should be equipped with a new set of tubes for plumbing and related gaskets.

**▲ WARNING ▲**

Water pressure supply must be between 0,4 and 0,8 MPa if sufficient pressure is not available we suggest that an additional water supply system is used.

**▲ WARNING ▲**

Before making any electrical connections make sure that the two strain relief connectors are firmly secured to the body of the machine in order to prevent inadvertent stress on the power cables.

**▲ WARNING ▲**

This machine should not be installed in kitchens.

**▲ WARNING ▲**

Hazardous voltage disconnect from power supply before servicing.

**▲ WARNING ▲**

The motor pump must be situated close to the machine in an accessible place for maintenance but not for accidental interference and where there is an optimal air circulation.

**▲ WARNING ▲**

The manufacturer declines any responsibility for any event leading to liability suits whenever grounding has not been completed according to current local, national, and international regulations and electrical codes, or other electrical parts have been connected improperly.

**▲ WARNING ▲**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or with lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

**▲ WARNING ▲**

- U.S.A. and CANADA only - Do not connect to a circuit operating at more than 150V to ground on each leg.

**▲ WARNING ▲**

This machine is not suitable for outdoor use. Jets of water should not be used to clean the machine, nor should it be placed where water jets are used.



### WARNING

In order to prevent cracks or leakage: do not store or install the Coffee machine in places where in boiler or hydraulicsystem to freeze.

### WARNING

Disconnect from power supply before the connection with the water pump.

### ATTENTION

Débrancher de l'alimentation avant la connexion avec la pompe à eau.

#### Note:

- The drinking water mains valve and the circuit breakers for the electrical system need to be located in the most convenient position for the operator to access them easily and quickly.
- This machine complies with the standard 61000-3-11, the impedance at the supply interface must be  $Z_{max}=0.356\ \Omega$ .

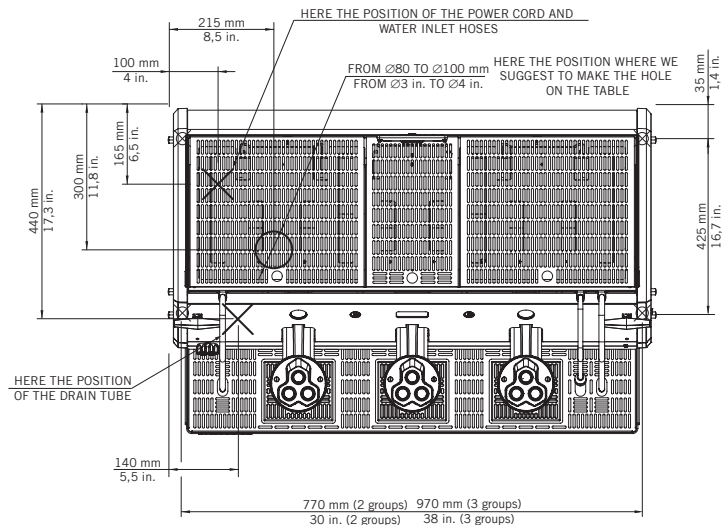


Fig. 2 - Installation guide

### 1) Installation guide

For best results, STRADA needs a minimum flow of water in input of 100 l/h and a pressure of 2.5 bar.


Installations that do not meet these requirements will cause a shorter life of the pump and may cause a high noise level during coffee brewing.

If the pressure and flow are not adequate, air bubbles may develop within the gears. This is called cavitation. Cavitation can impair the performance of the espresso machine.

If the incoming water of the espresso machine falls outside the recommended parameters, it is necessary to carry out one of the following installations:

**Pressure lower than 9 bar  
Flow rate lower than 100 l/h**

Installation with the rotary pump immediately after the water treatment system, upstream of the tee.

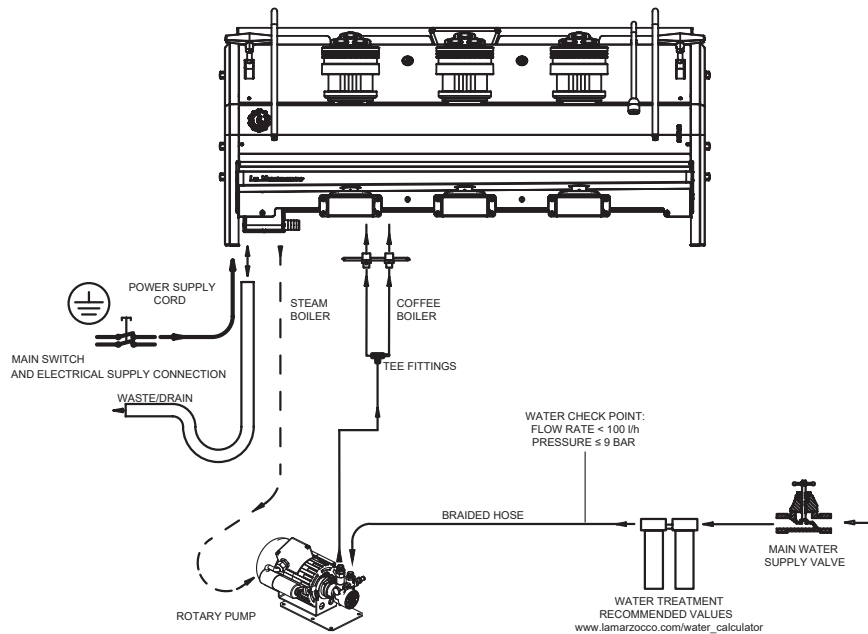


**Fig. 3 - Installation guide - type 1**

**Pressure higher than 9 bar**  
**Flow rate lower than 100 l/h**

Installation of the pressure reducer immediately after the water treatment system, upstream of the rotary pump.

Installation of the rotary pump (set to 9 bar) immediately after the pressure reducer, upstream of the tee.

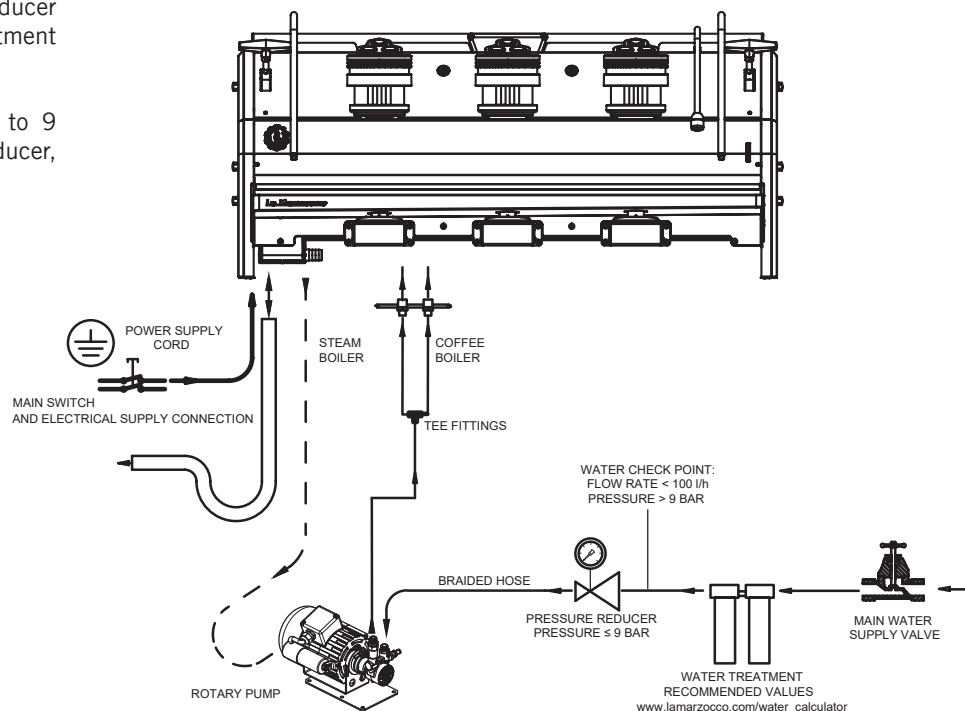

**Fig. 4 - Installation guide - type 2**


## 2) Accessories

In order to proceed with installation, it is necessary that the following are available:

- Pipes carrying drinking water with a 3/8"G (BSP) end connection; (3/8" Compression for USA and Canada)
- Electrical Supply according to the specification of the espresso machine purchased:
- Single/Three phase 220VAC - 50/60 Hz electrical connection with ground, protected socket and approved interlock switch
- Single phase 200VAC - 50/60 Hz electrical connection with ground, protected socket and approved interlock switch
- Three-phase, 380VAC - 50 Hz electrical connection with neutral + ground, near the bench on which the machine is installed and terminating in a suitable protected fivepole socket equipped with an approved interlock switch
- Waste water drain system.

## 3) Water test kit

In order to enable you to check if your water supply is within the suggested ranges, La Marzocco machines will be equipped with two units of a quick water test kit (see image below) including 6 test-strips and instruction cards.

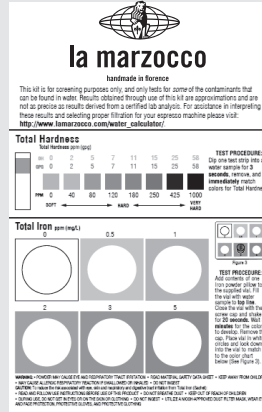


The parameters that you can measure are Total Hardness, Total Iron, Free Chlorine, Total Chlorine, pH & Total Alkalinity, Chlorides.

Ideally, you should perform a test on the water BEFORE the water treatment system and again AFTER the water system in order to verify if this is actually matching our suggested ranges.

Once the test has been performed, learn which treatment system is most appropriate for your particular water supply by filling out the online water calculator on our website: LA MARZOCCO WATER CALCULATOR ([http://www.lamarzocco.com/water\\_calculator/](http://www.lamarzocco.com/water_calculator/)).

## 4) Flowmeter safety removal

Before switch on, remove the clamp from the flowmeter located inside the machine, as indicated by the adhesive label applied on the main switch. Also remove the label from the main switch.

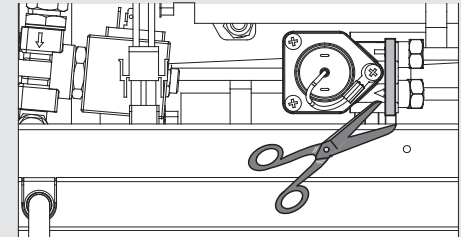

## 5) Water supply connection

In order to connect the machine up to the water mains proceed according to the indications given in the chapter about Installation and in compliance with any local/national safety standards of the location in which the machine is being installed.

The equipment is to be installed with adequate backflow protection to comply with applicable federal, state, and local codes.

To guarantee a correct and safe functioning of the machine and to maintain an adequate performance level and a high quality of the beverages being brewed it is important that the incoming water be of a hardness greater than 7°f (70ppm,

4°d) and less than 10°f (100ppm, 6°d), pH should be between 6.5 and 8.5 and the quantity of chlorides be less than 30mg/l . Respecting these values allows the machine to operate at maximum efficiency. If these parameters are not present, a specific filtration device should be installed, while always adhering to the local national standards in place regarding potable water.

Then connect the inlet of the water filter/softener (if present) to the drinking water supply using one of the supplied stainless steel braided hoses. Before connecting the filter to the water pump, flush the water supply line and the filtration system in order to eliminate any residual particles which could otherwise get stuck in taps or valves thus preventing them from working properly. Connect the water supply connection of the espresso machine to the water pump outlet using one of the supplied stainless steel braided hoses. Then connect the water pump inlet to the water filter/softener outlet (if present).

**Note:** The water pump is a differential pressure volumetric pump and has been designed to be used exclusively with cold water. Make sure that water is always present while the pump is operating, otherwise air can be introduced into the brew boiler causing an undesirable condition and the pump can be damaged.

## 6) Electrical connections

### a) Power supply cord

- This is the main power supply cable that provides power to the entire espresso machine. There are different types of cable based upon the electrical requirements of the espresso machine purchased:

- 200/220VAC 1 Phase 3-core cable with 4/6/10mm<sup>2</sup> cross section or AWG 12/10/8 for 2,3 4 group versions, secured to espresso machine via a strain relief connector

- 220VAC 3 Phase 4-core cable with 4 mm<sup>2</sup> cross section for 2 , 3 and 4 group versions, secured to espresso machine via a strain relief connector

- 380 VAC 3 Phase 5-core cable with 2.5mm<sup>2</sup> cross section for 2, 3 and 4 group versions, secured to espresso machine via a strain relief connector.

### b) Water pump motor power cord


This is the power supply for the water pump motor. The internal electronics will switch the pump motor on when needed.

- 3-core cable with 1.5 mm<sup>2</sup> cross section or 3-core AWG 16 (for UL version) secured to espresso machine via a strain relief connector.


### c) Quick connection between the water pump and the espresso coffee machine

The electrical connection must be made through the use of the connectors, as shown in the following figures:


- View of the connectors;

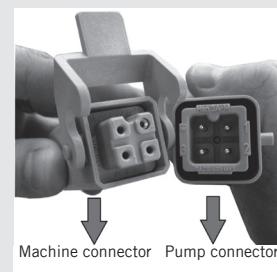

- Cable connection;

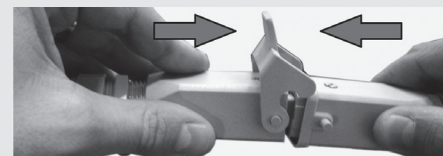

- Cable tightening;

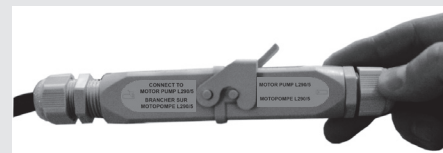

## 7) Waste water drain connection

The espresso machine drain is to be connected by means of the included reinforced plastic tubing. Connect one end of the reinforced plastic tubing to the drain

hose connection on the left side of the espresso machine, secure with included hose clamp. Connect the other end to a suitable waste water collection system.

In case such a system is not available, drained liquids may be collected in a suitable bucket and any necessary drain pipe extensions shall be made using steel-lined PVC tubing and suitable hose clamps.

**Water specifications table**

		<b>Min.</b>	<b>Max.</b>
T.D.S.	ppm	90	150
Total Hardness	ppm	70	100
Total Iron (Fe <sup>+2</sup> /Fe <sup>+3</sup> )	ppm	0	0,02
Free Chlorine (Cl <sub>2</sub> )	ppm	0	0,05
Total Chlorine (Cl <sub>2</sub> )	ppm	0	0,1
pH	value	6,5	8,5
Alkalinity	ppm	40	80
Chloride (Cl <sup>-</sup> )	ppm	not more	30

**N.B.:** Test water quality (the warranty is void if water parameters are not within the range specified in the section “installation”)

## 4. Machine Operation and Coffee Preparation

### CAUTION

Never remove the filter holder when water is being delivered. This operation can be extremely dangerous since the high pressure built-up inside the blind filter would spray out hot and slightly caustic water, which may cause severe burns. The Coffee Boiler contains water at elevated temperature. Water temperature over 125°F / 52°C can cause severe burns instantly or death from scalding.

### WARNING

The machine must not be dipped in, nor splashed with, water in order to clean it. For cleaning operations, please follow the instructions listed below very carefully.

### WARNING

**This machine is designed only for preparing coffee and hot drinks.**

### IMPORTANT

To improve the flavor of the espresso, the temperature of the water in the coffee boiler and therefore of the groups may eventually be raised or lowered via the digital display (please consult the Software Programming Manual for detailed instructions).

#### 1) Starting the espresso machine

##### a) Filling the boilers with water


Once the installation procedures have been completed, it is necessary to fill the boiler tanks with water. Complete the following procedure to properly fill the boiler tanks:

##### • Coffee boiler


The water flows inside the coffee boiler directly, as soon as the water system and purifier taps (if present) are opened. Since the inflow of water will compress the air in the boiler, it will be necessary to remove or “bleed” the air from the coffee boilers. All air must be removed in order to completely “saturate” the coffee boiler/

group assemblies.

To remove the air from the boiler, or “bleed the groups”, it will be necessary to remove the plastic keypad from the top of the group.

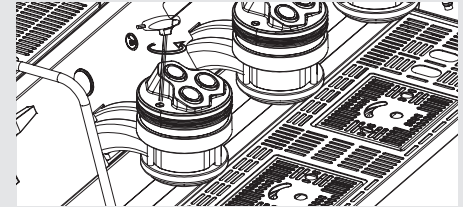


Loosen the bleed screws one at a time to allow air to escape until water flows from below the screw head. Tighten the screw to stop the water from flowing. Over tightening can cause damage to the sealing washer and the group cover. Repeat this procedure on all groups.

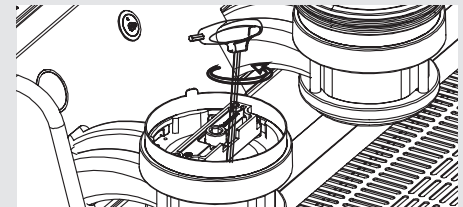


##### • Steam boiler

Turn the main switch to position “1” or ON, the automatic steam boiler level gauge

will be switched on, activating the auto-fill solenoid valve and the motor pump. This will fill the steam boiler to a predetermined level and will shut off when full.

**Note:** Air inside the steam boiler may build up pressure (which may be detected through the pressure gauge). Once the pump stops, check the display, the message “Coffee Boiler Filled?” should be displayed. Press  to confirm that the preceding procedures are complete.


The installation is now complete and the espresso machine should be heating to operating temperatures.

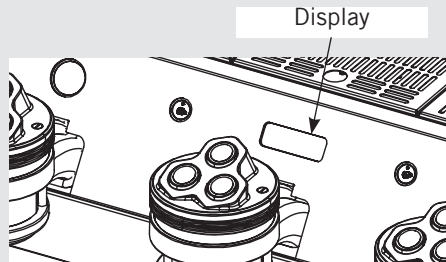

## 2) Waiting for the Espresso Machine to Heat to Operating Temperature

During this time, it may happen that the pointer of the coffee boiler pressure reaches as high as 14-15 bar. This may happen anytime that the heating element is in the “on” condition. In this case, it

is necessary to adjust the expansion valve (see the picture below about the three coffee boiler expansion valves) in such a way that the pressure never exceeds 13 bar.

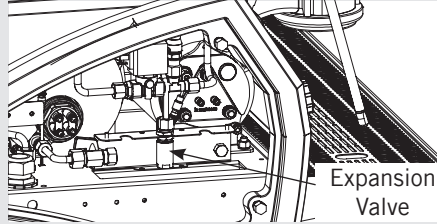

In normal operating conditions, the coffee boiler pressure transducer, while brewing, can read anywhere from 0-12 bar when brewing.

When the steam boiler reaches operating temperature, the light on the hot water dispense button will switch on.

## 3) Brewing after first installation

Once the first installation procedures are finished, before proceeding with brewing coffee, hot water and steam, please follow these steps:


- Engage the portafilters by inserting them into each group, brew water through each group for at least two minutes.
- Being careful to avoid burns, turn on each steam wand for at least one minute.

- Turn on the hot water valve for the time necessary to allow the following quantities of water to be brewed:
  - At least 1 liter for a 1/2 group machine
  - At least 2 liters for a 3 group machine

## 4) Installing the portafilters

Install the portafilter(s) by inserting them into the group and rotate the handle from left to right. When the portafilters are inserted properly, you can press any of brew buttons to start the flow of water through the portafilter. You should allow hot water to pass through the empty portafilter(s) for a few seconds each time, in order to preheat the portafilter.

**Note:** It is important to leave the portafilters installed in the espresso machine when not in use. The portafilter must remain heated for the brew process to function correctly.

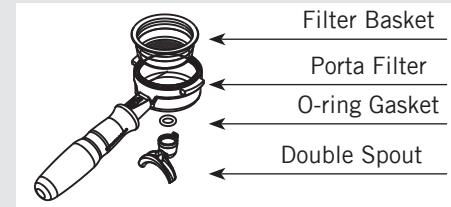



### 5) Brewing coffee

Now you can brew an espresso. Disengage one of the portafilters, fill the filter with ground coffee, tamp the ground coffee with the tamper supplied (exerting a force of 20 kg) and re-engage the portafilter to the group. Press a button on the keypad to begin the brewing process.

**Note:** Some baristas believe it is important to press the brewing button prior to installing the portafilter to allow the water to flush any remaining coffee oils and particles from the group. Some also flush just after brewing coffee for the same reason. Please experiment to find the best possible procedure for you.

### 6) Water pump

Whenever you are brewing coffee, and you can adjust the pump pressure by turning the by-pass screw (below the plug located on the side to which the pump power supply is connected) clockwise to increase and counter-clockwise to reduce pressure. Adjust pressure only when at least one group is brewing coffee.

**Note:** When the heating element in the coffee boiler is energized, the water will expand increasing the start-up pressure. Once the maximum pressure is reached, the expansion (safety) valve should start working by discharging a few drops of water, in order to prevent such pressure

from exceeding 11-12 bar.

In case the pressure exceeds 12 bar, you must adjust the expansion valve by unscrewing the cap slightly. If this is not sufficient, remove the valve and clear away any calcium deposits. This remedy is valid also in case the valve remains open in the drain position (i.e. the pressure cannot increase to 8 bar approx.).

### 7) General notes for coffee preparation


The portafilters must remain heated since they are at the lowest position of the group itself, and they are partially isolated due to the rubber gasket between them. This can be accomplished by leaving the portafilters installed in the machine when not in use. The portafilters may also be actively heated. This procedure may be carried out by brewing some hot water through the portafilter then turning off the water flow, before making coffee. We recommend removing the spent coffee puck directly after brewing.

The size of the coffee granules is extremely important in preparing a good cup of coffee, other than the type of coffee mix used, quite obviously. The ideal grinding can be determined by making various coffees using the amount of ground coffee that you would normally use for each cup (we recommend at least 6-7g). The best grinding is that which allows coffee to flow out from the filter holder spouts neither

too slowly (drop by drop) nor too quickly (quick light brown flow). A general rule is that a double dose should dispense approximately 25cc or 2 fluid oz. of espresso in approximately 25 seconds.

### 8) Cup Warmer

Press Cup Warmer Button for enabled or disabled the cup warmer. This function work in two modes continuous or timed (see the Software Programming Manual for further instructions).

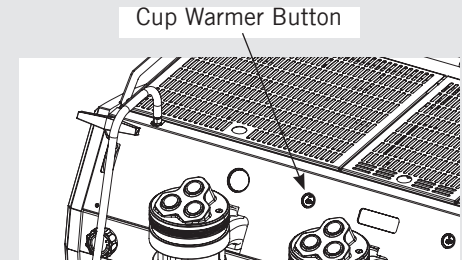

## 5. Dispensing Steam and Hot Water

### 1) Steaming milk or other liquids

In order to allow for any condensed water in the wand to be released ALWAYS allow some steam to be discharged by turning on the valve before inserting the steam wand into the pitcher of liquid to be heated.

Dip one of the 2 steam wands (part 8, page 7) which are connected to the steam valve, into the liquid to be heated, turn the steam knob gradually until steam comes out at the end of the wand.

The steam will transfer heat to the liquid raising its temperature up to boiling point. Be careful not to allow liquid to overflow in order to avoid severe burns.


In order to prevent the heated liquid from being sucked back into the steam boiler it is recommended before using the wand that you purge the steam valve and steam wand by opening the valve for a few seconds to allow steam to escape to the atmosphere from the end of the steam wand. Failure to do so can cause the heated liquid to transfer from the heated liquid container to the steam boiler (via vacuum created from cooling parts).

This condition is undesirable and can cause contamination in the steam boiler. After use remember to purge the wand by opening the steam valve for a few seconds, and then clean the outside of the wand itself with an appropriate cloth.

In order to prepare milk for making cappuccino with the right amount of foam, go through the following steps:

- After purging the steam wand place the container half-full of milk underneath, carefully open the steam valve and raise the container so as to bring the wand end to a point just below the surface of the milk; at this point, move the container up and down just enough to dip the nozzle end in and out of the milk until you get the right amount of foam, bring the temperature of the milk almost up to 149/158°F or 65/70°C. You can then pour this milk into a cup containing warm espresso and you will end up with a fresh cup of cappuccino.


### 2) Preparing tea and other hot drinks.

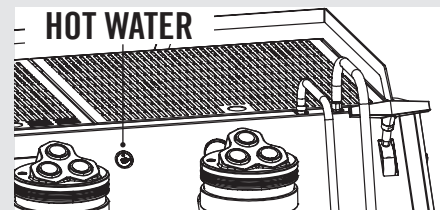

You may dispense hot water by using the fixed nozzle (part 6, page 7). To dispense hot water, press the hot water button.

This button commands hot water delivery. The temperature of the water may be adjusted by adjusting the mixing valve.

### HOT WATER MIX VALVE

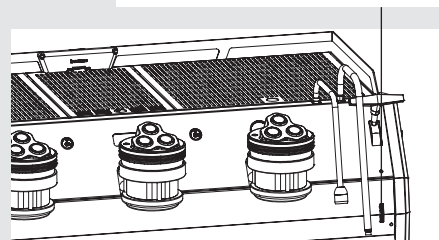

## 6. Maintenance and Periodic Cleaning Operations

### **WARNING**

If the above-mentioned instructions are not adhered to the manufacturer cannot be held responsible for damage to persons or things.

### **WARNING**

In order to prevent cracks or leakage: do not store or install the coffee machine in places where temperature may cause water in boiler or hydraulic system to freeze.

### **WARNING**

The machine is intended to be connected with a service disconnect, and it is advisable that a GFCI with a rated trip threshold not exceeding 6mA is installed.

### **WARNING**

The machine must be installed so that qualified technical personnel can easily access it for eventual maintenance.

### **WARNING**

The machine must not be dipped in, nor splashed with, water in order to clean it. For cleaning operations, please follow the instructions listed below very carefully.

### **WARNING**

Do not remove the filter holder while relative group is brewing hot liquids.

The Coffee Boiler contains water at elevated temperature. Water temperature over 125°F / 52°C can cause severe burns instantly or death from scalding.

### **WARNING**

This machine is for professional use only and should be installed in locations where its use and maintenance is restricted to trained personnel.

### **WARNING**

Jets of water should not be used to clean the machine, nor should it be placed where water jets are used.

#### 1) Cleaning groups and drain wells

- Put a tablespoon of detergent powder for coffee machines into the blind filter, supplied with the machine, and tighten it onto the group you want to clean by using a normal filter holder.
- Turn the Paddle Valve on and off approximately 10 times (10 seconds intervals) on each group.
- Rinse the group using a normal filter by running hot water through it several times.

## 2) Cleaning filters

- Put 2 or 3 teaspoons of detergent powder for coffee machines in about 1/2 a litre of water inside a heat-resistant container and boil.
- Dip filters in the boiled solution and leave them fully submerged for about 30 minutes.
- Rinse thoroughly with clean water and run hot water through one group several times with the filters in place.
- Make one cup of coffee and discard in order to remove any unpleasant flavor.

## 3) Cleaning filter holders (portafilters)

Using the proper cleaning tool (brush) wash the filter holders under hot water, a neutral detergent may also be used. For extraordinary cleaning see the Portafilter Manual.

## 4) Cleaning the drain collector

Remove the drain tray grill at least twice a week and clean, pull out the water drain collector and clean it thoroughly. Inspect and clean also the drain box and remove any leftover grounds.

## 5) Cleaning the body


Wipe the stainless steel surfaces with a soft, non abrasive cloth in the direction of the glazing marks, if any. Do not use any alcohol or solvents whatsoever on painted or imprinted parts in order not to damage them.

## 6) Cleaning the hot water and steam nozzles

Steam nozzles must be cleaned immediately after use with a damp cloth and by producing a short burst of steam so as to prevent the formation of deposits inside the nozzles themselves, which may alter the flavor of other drinks to be heated. Hot water nozzles must be cleaned periodically with a damp cloth.

## 7) Cleaning the diffuser screen

- Due to filter holder discharge operations (subsequent to coffee brewing), a certain amount of coffee grounds may slowly build-up on and obstruct, even partially, the diffuser screen. To clean it, you must first remove it by unscrewing the diffuser screw.

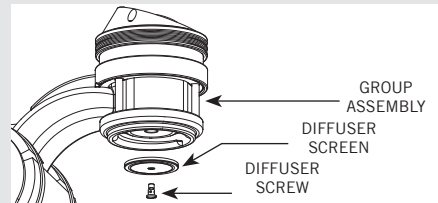

- Put 2 or 3 teaspoons of cleaning detergent for coffee machines in about 1/2 a litre of water inside a heat-resistant container and boil.
- Place the diffuser screen(s) and diffuser screw(s) in the solution and leave them fully submerged for about 30 minutes.

Rinse thoroughly with clean water. Install and run hot water through each group several times with the screen installed.

## 8) Water Filter/Softener

Please see the documentation accompanying the water filter/softener for proper operating and cleaning instructions.

- **Steam boiler draining:** to activate this function you need to access the programming menu (see p. 121). Yearly, we recommend to fully drain the steam boiler by means of the specific drain cock located on the side of the boiler or under the boiler.

## IMPORTANT

If the machine has not been used for more than 8 hours or, in any case, after long periods of being idle, in order to use the machine to its full potential it is necessary to perform some cleaning cycles before brewing beverages as follows:

- Groups: with the portafilters engaged in the groups brew water through each for at least two minutes
- Being careful to avoid burns, turn on

each steam wand for at least one minute.  
- Turn on the hot water valve for the time necessary to allow the following quantities of water to be brewed:

At least 1 liter for a 1/2 group machine

At least 2 liters for a 3 group machine

If the machine is not going to be used for long periods of time, it is advisable to

follow these safety indications:

- Disconnect the machine from the water mains or interrupt the water connection via a mains tap.

- Disconnect the machine from the electrical mains.

## 7. De-commissioning and Demolition

### 1) De-commissioning and demolition

Start by setting the main switch to the “O” or OFF position.

#### Disconnecting from the power outlet

Disconnect the espresso machine from the electrical network by switching off the associated circuit breaker or circuit protection device. Remove the power supply cord from the power connection. Remove the Pump Motor Power Cord from the water pump motor.

#### Disconnecting from the water system

Shut off the water supply by closing the specific tap located upstream of the water filter/softener inlet. Disconnect the water pipe at the water filter/softener inlet. Remove the hose connecting the espresso machine to the water pump. Remove

the reinforced plastic tubing on the drain connection.

At this point, the machine may be removed from the bar, being very careful not to drop it or squash your fingers.

The machine is made out of various materials and therefore, if you do not intend to put it back in service, it must be taken to a special disposal company which will select the materials which can be recycled and discard the others.

Current regulations make it illegal to discard such machine by leaving it on public grounds or on any private property.

**Recycling notice: Warning for the protection of the environment.**

Used Electrical and electronic waste contains hazardous but also valuable and scarce materials which should be recovered and recycled properly. We kindly ask that you contribute to the protection of the environment and natural resources by delivering used equipment to the relevant recycling locations if such locations are available in your country.



## 8. Mandatory Maintenance and Check-up Operations

---

These operations are in addition to the Maintenance and Periodic Cleaning Operations as specified in Chapter 6.

The following maintenance and check-up operations could be carried out by a qualified technician.  
The time required for the periodic maintenance is determined by the quantity of daily work and/or coffee consumption.

**N.B. These periodic maintenance operations are not covered by warranty.**

---

### EVERY THREE/FOUR MONTHS

- |                                             |                                                                                                 |                                                                                                           |
|---------------------------------------------|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| ▪ Replace group gaskets                     | ▪ Check brew temperature                                                                        | otherwise warranty is voided)                                                                             |
| ▪ Replace diffuser screens                  | ▪ Check that brew pressure is                                                                   | ▪ Check filter basket condition                                                                           |
| ▪ Clean auto-fill probe                     | at 9bar                                                                                         | ▪ Check shot volumes                                                                                      |
| ▪ Check vacuum breaker for proper operation | ▪ Check all switches for proper operation                                                       | ▪ Test flowmeter's ohm value (ohm value is acceptable if greater than 1.8 K ohm, and less than 2.2 K ohm) |
| ▪ Inspect water inlet valve                 | ▪ Check/note water hardness                                                                     |                                                                                                           |
| ▪ Inspect drain system for leaks or clogs   | (Water quality must be within the range of parameters specified in the chapter on Installation, |                                                                                                           |
| ▪ Check flow rate for each group            |                                                                                                 |                                                                                                           |

---

### EVERY YEAR (in addition to the above)

- |                                       |                                              |                                                         |
|---------------------------------------|----------------------------------------------|---------------------------------------------------------|
| ▪ Replace portafilter baskets         | ▪ Inspect boilers safety switches            | tightness at 2,4Nm of each cable on the terminal block. |
| ▪ Inspect group valve plungers        | ▪ Inspect electrical wiring condition        |                                                         |
| ▪ Inspect vacuum breaker              | ▪ Replace over-pressure valve (safety valve) |                                                         |
| ▪ Inspect expansion valve             | ▪ Accurate control of the                    |                                                         |
| ▪ Inspect electrical wiring condition |                                              |                                                         |

---

### EVERY 3 YEARS (in addition to the above)

- Check the condition of the inside of boilers and if necessary rinse out with a proper cleaning product allowed for food and beverage appliances.

## 9. Precision Scale


**WARNING**  
Handle with care maximum load  
1Kg do not lift.

**WARNING**  
The individual grid of the scale  
is a fragile component, handle  
and store with care.

**WARNING**  
The height of the bottom tray is  
fixed.

### 1) Use precautions

Remove the adhesive label with care; if needed, remove any adhesive residues from the surface using a neutral detergent.

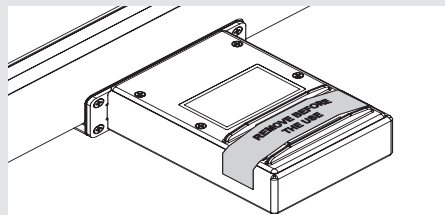

Don't spill water onto the scale box. If needed, gently remove it with an absorbent cloth. Should any water and/or dirt penetrate into the holes highlighted


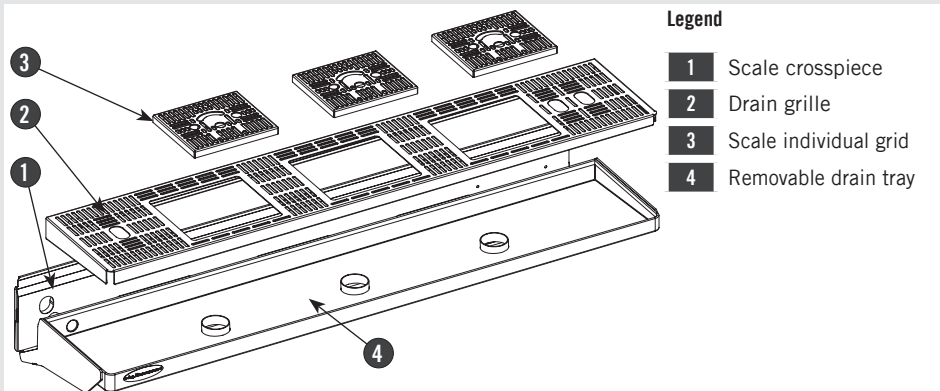


Fig. 5 - Precision scale - 2 and 3 brewing groups

in the figure below, gently clean and dry them with an absorbent paper cloth. Dirt build-up or water stagnation may prevent the scale individual grid from properly settling into place.

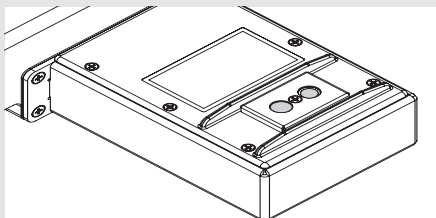

The weighing system in static conditions (\*) has a rated accuracy of  $\pm 0.5g$ . For correct operation, make sure that:

- Maintenance is performed properly, by an authorized person and in the manner prescribed in this manual;
- Please use the machine according to the instructions specified in this manual;
- Please make sure the machine is installed on a level and firm counter;
- Please make sure the power supply is stable and without electrical noises.

The weighing stage is inherently delicate, in fact it is affected by:

- Vibration of the bench caused for example by other devices;
- Machine vibrations caused, for example, by the use of the adjacent group.


(\*) Static weighing means weighing an object whose weight is fixed during the entire weighing.

The machine is not a weighing device certified for legal weighing.

- The weighing system is a precision device that requires a lot of caution in terms of use, cleaning and maintenance.

- Should the main grid or tray be removed, ensure not to hit the load cells during the disassembly and reassembly operations.

- To proceed with the weighing of the filter holder either empty or filled with coffee powder, place it as shown below:

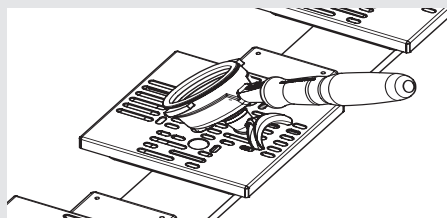

- Use only original La Marzocco filters and filter holders, identified by the following symbol:



- Use only filter holders with double spout;

- Do not place on the scale objects weighing more than 1kg;

- Never load more than 1 kg, to prevent any damage to the scales;

- Use the high precision scale with care, avoid shocks, falling objects and sudden load peaks;

- Any object to be weighed must be placed correctly on the scales grid.

## 2) Cleaning

- The cleaning of the “individual grids” must be performed with care, without overloading the cells;


- For proper weighing of the filter holder, make sure the grid is clean and dry;

- To avoid contact with dirt before placing the filter holder, clean and dry the grid;

- Please be careful during the cleaning procedures to avoid the water dripping on the scale and its electrical components;

- Don't wash the scale individual grids in a dishwasher; wash them manually instead, then immediately dry them.

If you wash the grid under a strong water flow, remove the magnetic support highlighted in the figure (just pull to detach the magnets). Make sure that the magnets are always dry and clean.

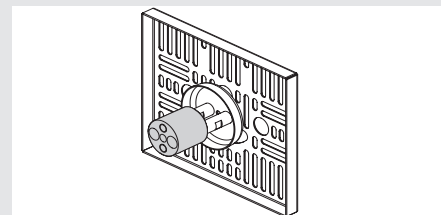


- To clean the drain tray you need to remove the individual grids (part 3, figure 5) first, then the drain grille (part 2, figure 5) and finally the tray (part 4, figure 5). Make sure not to hit the load cells during the disassembly and reassembly operations.




### 3) Removing the electronic box

To remove the electronic box you need to remove the lower front panel, unscrew and remove the lower screws ❶, loosen the upper screws ❷ without removing them and move the scale crosspiece up. Now you can access the electronic box or remove it.

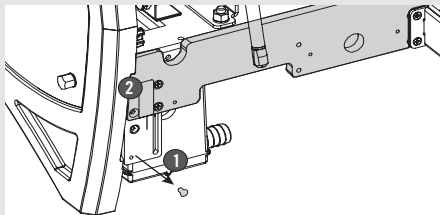


## 10. Software Programming Guide


## “Barista” Programming

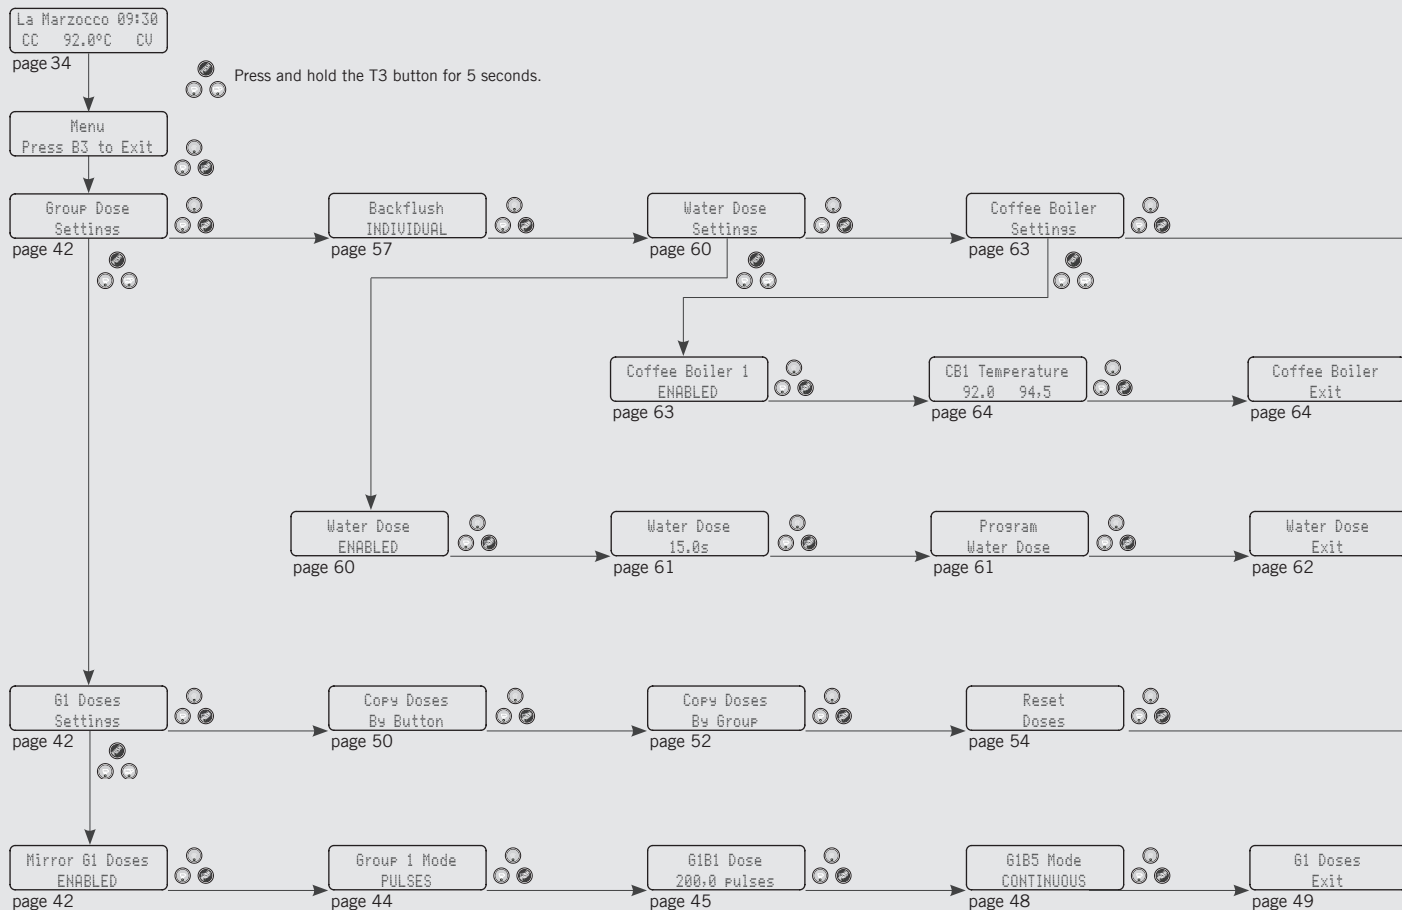


## “Barista” Programming

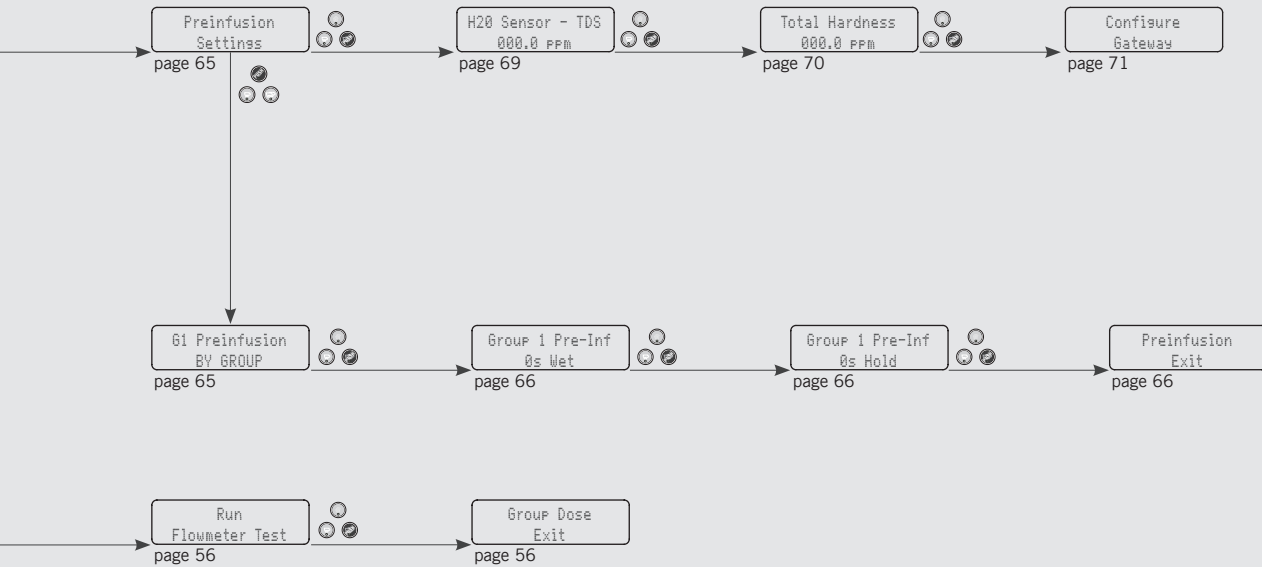

## “Technical” Programming

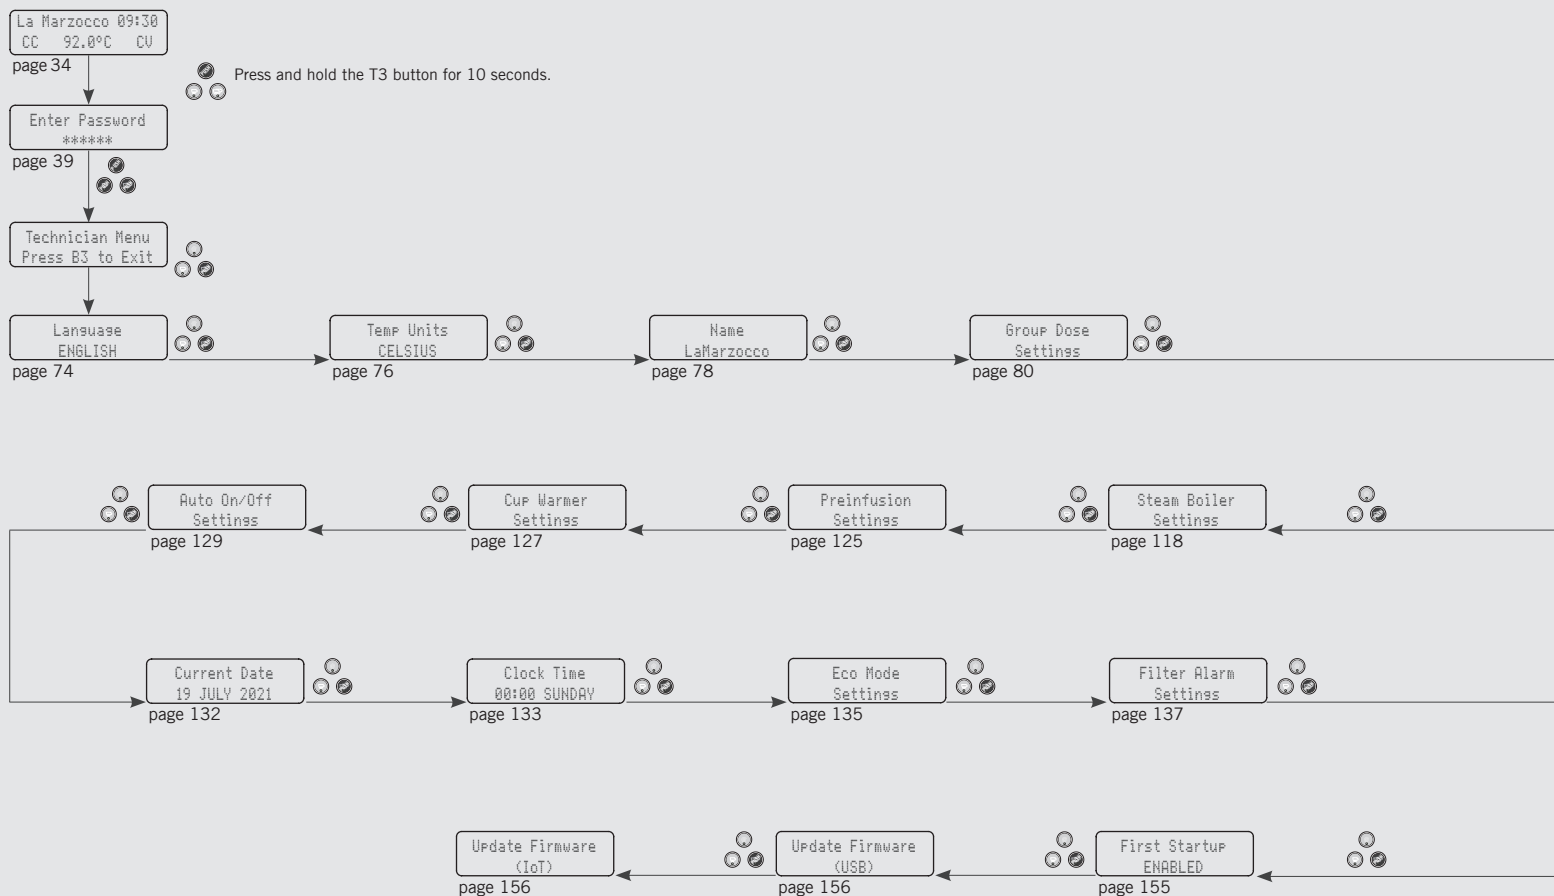

## “Technical” Programming

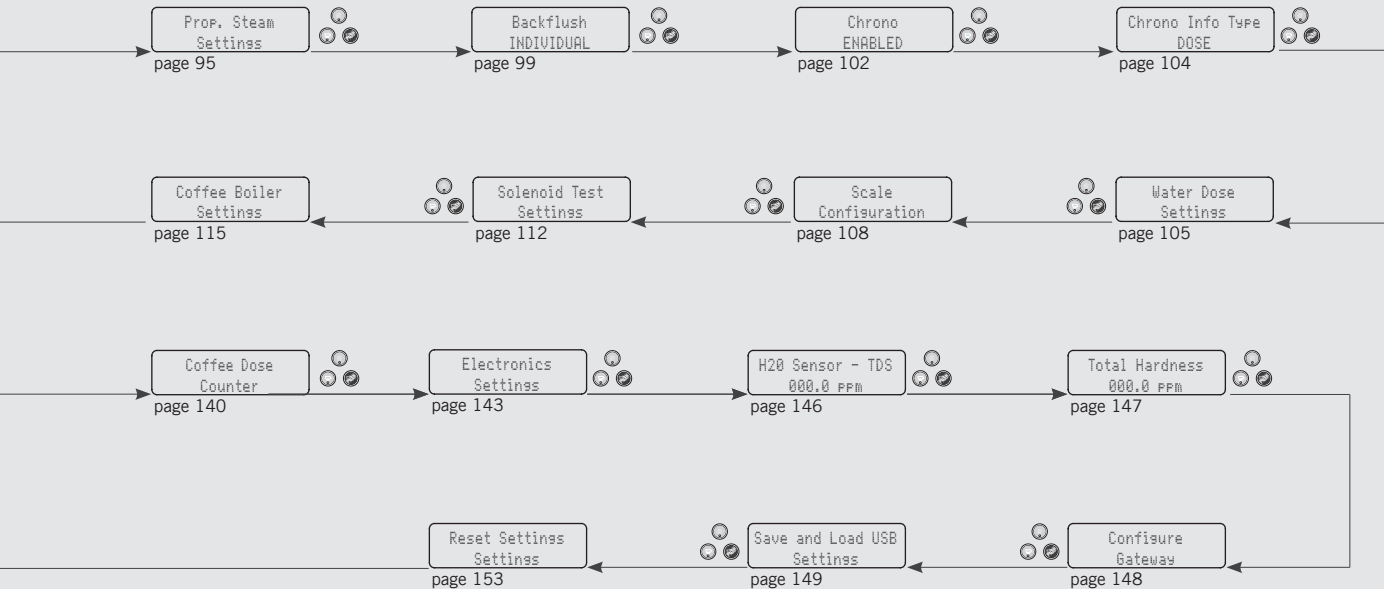

## Programming Introduction


---

### Description

- This espresso machine has a CPU and many configurable settings.
- Additionally, there are many feedback controls employed in this espresso machine to troubleshoot problems should they occur.
- The following is a brief introduction to the controls and display and how they interact with the operator.

## Digital Display


---

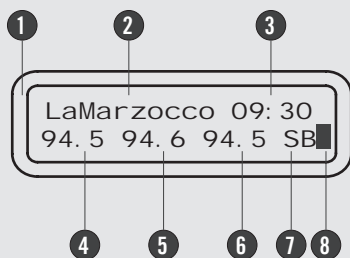




- |   |                                     |   |                                                                                  |
|---|-------------------------------------|---|----------------------------------------------------------------------------------|
| 1 | Digital display                     | 5 | 2nd group coffee boiler temperature                                              |
| 2 | Name                                | 6 | 3rd group coffee boiler temperature                                              |
| 3 | Daily timetable                     | 7 | Steam Boiler                                                                     |
| 4 | 1st group coffee boiler temperature | 8 | Heating indicator (on during heating, off when the temperature has been reached) |

The digital display is a backlit display capable of displaying 2 lines of 16 characters. The display enables the operator to interact with the espresso machine to visibly change parameter values. The display also provides valuable information to the operator.

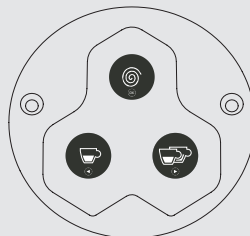There are several warnings that can be displayed to alert the operator of an unusual condition or a fault. Additionally, simple messages are displayed alerting the operator that an action has been started or that a process needs to begin.




The keypad has two functions. The first is for control of the espresso. The second is for programming individual software parameters. The programming of the individual parameters is possible only using the buttons in the group 1 (group starting from the left).

Button	Description
	<p>This button is used to control the brewing of the single espresso. It is also used in the programming of the individual parameters such as the “back” button in the menu.</p> <p>For simplicity's sake in this manual it will be represented with the name <b>T1</b>.</p>
	<p>This button is used to control the brewing of the double espresso. It is also used in the programming of the individual parameters such as the “forward” button in the menu.</p> <p>For simplicity's sake in this manual it will be represented with the name <b>T2</b>.</p>
	<p>This button is used for a continuous control of the brewing of the espresso. It is also used in the programming of the individual parameters such as the “enter” button in the menu.</p> <p>For simplicity's sake in this manual it will be represented with the name <b>T3</b>.</p>

# Start Up Procedures

## Turning the Espresso Machine On

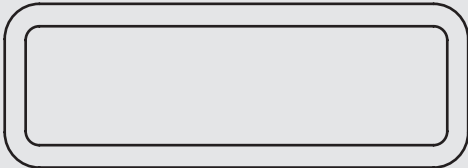

### Description

The following is the procedure for turning on the power to the espresso machine.

- Please follow the procedures carefully to avoid any damage to the espresso machine.

- Proceed checking for water connection to the espresso machine.
- Proceed making sure you have filled the boilers.

Display	Operating Procedure
	<p><b>1</b> Turn the Main Switch to the 1 position.</p>
	<p><b>2</b> To continue with the start up process, press the T3 button after filling the steam boiler.</p>
	<p><b>3</b> To continue with the start up process, press the T3 button after the saturation of the coffee boiler.</p>
	<p>The rectangles next to CB and SB indicate the warming up of the water contained in the boilers. When the set temperature is reached, these rectangles turn off and all the lights of the buttons turn on. Now the machine is ready for use. During the normal operation of the machine, the flashing of the rectangles indicates the intermittent heating necessary for maintaining the temperature.</p> <p><b>4</b> <b>NOTE:</b> Ensure all air is removed from the group prior to staring the espresso machine. This only needs to be completed once during the initial setup or when water is drained from the coffee boiler. Instructions for bleeding the groups of air can be found in the Installation Guide.</p>

**WARNING**

HAZARDOUS VOLTAGE DISCONNECT FROM POWER  
 SUPPLY BEFORE SERVICING



Turning the Espresso Machine Off

OFF



00: 00

Description

The following is the procedure for turning off power to the espresso machine.

- Please follow the procedures carefully to avoid any damage to the espresso machine.

- This machine has two off settings. One setting turns off all of the components in the espresso machine and the other turns off power to the complete espresso machine.


Display	Operating Procedure
	<p>1 The following is the procedure for safely turning off the espresso machine.</p>
<div>94.4 00:00 95.5 95.1 SB</div>	<p>2 Press and hold the buttons T2 and T3 at the same time. The display changes to the following:</p>
<div>OFF 00:00</div>	<p>3 This is the OFF setting used in the normal operating conditions.</p> <p>During servicing or other conditions that warrant it, the main switch should be turned to the 0 position.</p> <p>The espresso machine is off and display should be blank. It is important to follow this procedure when turning off the machine. Failure to do so can damage the electronics.</p>
<div></div>	<p>4</p> <div></div>

**WARNING**

HAZARDOUS VOLTAGE DISCONNECT FROM POWER  
SUPPLY BEFORE SERVICING

# Accessing Programming Mode

## Programming Mode

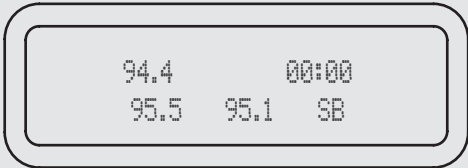


## Description

- To change the values of any parameter the operator must first enter into the programming mode.
  - There are two levels within the programming mode that allow the programming of specific parameters.
  - The two programming levels are as follows:
- **Barista Programming** - The parameters contained within this level are ones the operator can change to affect the quality of the espresso. No password is required for access.



Display	Operating Procedure
	<b>"Barista" Programming Level</b>
	<b>1</b> While the espresso machine is on, press and hold the button T3. After approximately 5 seconds the following display appears.
	<b>2</b> This is the "Barista" programming level. To program the brewing amount for each button, to set the coffee boilers, the pre-infusion, and to enable/disable the resistance of the cup warmer if present.
	<b>3</b> To exit the programming mode, scroll to the exit menu, using the buttons T1 or T2. Press the T3 button to confirm the exit, or press at the same time the buttons T2 and T3.

### Programming Mode

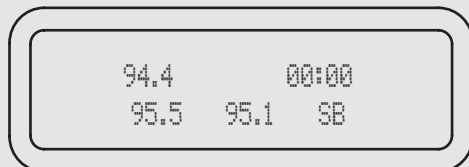

### Description

- **Technical Programming** - The parameters contained within this level are ones the operator can change to affect the performance of the espresso machine. These parameters are set in the factory and their adjustment requires the intervention of a service technician. La Marzocco recommends that no changes are made at this level. The Technician Password is required for access.

Display	Operating Procedure
	<p><b>“Technical” Programming Level</b></p>
	<p><b>4</b> While the espresso machine is on, press and hold the button T3. After approximately 10 seconds the following display appears.</p> <p>This is the “Technical” programming level. Enter the password and press the buttons T1 and T2 to move between the available parameters, press the T3 button to confirm.</p> <p><b>5</b> Note: You must scroll to the exit menu to exit the programming mode, or press at the same time the buttons T2 and T3.</p>


# Cleaning Cycles



## Cleaning Cycles



### Description


- This parameter allows the operator to carry out the washing of the coffee groups, in an automatic way, by running multiple cleaning cycles.
- This espresso machine has a group rinsing function (rinsing jets) integrated in the electronics.
- The rinsing procedure is provided to give the operator more flexibility and freedom with regard to this operation.
- Do not perform the cleaning procedure when other groups are dispensing coffee.

Display	Operating Procedure
	<p>When the espresso machine is on, to enable the washing procedure press and hold at the same time the buttons</p> <p><b>1</b> T1 and T3.</p> <p>This activates the washing procedure of each group.</p> <p>When activated, the water pump comes into operation, and the electric valve of the specific group being washed will turn on and off the cycle. There are about 10 preset cycles with an interval of 4 seconds. To manually stop the rinsing, press any key.</p> <p><b>2</b></p> <p><b>NOTE:</b> In order to properly rinse the groups, put a small amount of detergent in a blind portafilter basket and insert it in the group to be rinsed before activating the rinsing process.</p>

**WARNING**

MOST DETERGENTS CAUSE FOAMING DURING THE CLEANING PROCESS. THIS FOAM COLLECTS AT THE DRAIN BOX AND CAN PROHIBIT WASTE WATER FROM DRAINING PROPERLY.

RINSING MULTIPLE GROUPS SIMULTANEOUSLY COULD CAUSE THE DRAIN BOX TO OVERFLOW.

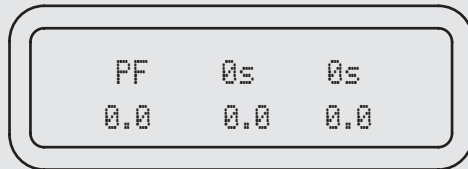**Brewratio****Description**

The procedure for weighing the filter holder either empty or filled with coffee powder is shown below.


- This parameter records the values for the brew according to the brew ratio technology.
- These values can be changed even manually by entering the software settings.

- To brew in brew ratio mode, set this mode by entering the software settings.
- Brew ratio: this mode is the ratio between the coffee powder and the weight of the drink

Display	Operating Procedure
	<b>1</b> When the espresso machine is on, press and hold the button T2. After about 5 seconds the following screen is displayed.
	<b>2</b> When the value is no longer flashing, place the empty filter holder on the appropriate seat of the grid as described in chapter 9. The value is automatically recorded. (*)
	<b>3</b> Press and hold the button T1. After about 5 seconds the following screen is displayed.
	<b>4</b> When the value is no longer flashing, place the filter holder filled with coffee powder on the appropriate seat of the grid as described in chapter 9. The value is automatically recorded.  This procedure can be repeated for all the brewing groups.
	(*) This procedure must be performed at the first installation, though it is possible to repeat it anytime (for example if you get a new portafilter set).

## “Barista” Programming

### Program Dose

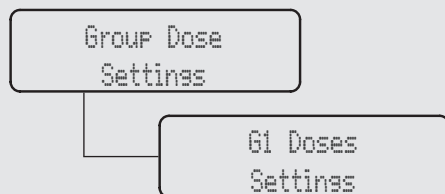


### Description

- This parameter allows the operator to program the amount of coffee (brewing amount) for each button on the keyboard.
- The brewing amount can be set in terms of time (sec. ) or pulses. This number refers to the number of pulses that the flowmeter sends to the CPU.
- Once programmed, the button remains lighted.
- It is possible to set the dose for both a short and a long shot on the same key.
- The setting of the first group is automatically copied to the subsequent groups.
- It is possible to set each key individually, in this case the dose of the first group will no longer be used.
- It is possible to copy the doses of any key to the others.

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<b>1</b> When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.
<div>GROUP Dose Settings</div>	<b>2</b> Press the button T1 or T2 to display the following menu:
<div>G1 Doses Settings</div>	<b>3</b> Press the T3 button to start the doses programming procedure.
<div>Mirror G1 Doses ENABLED</div>	<b>4</b> Press the T3 button to access the menu, then navigate using T1 and T2 to choose between <b>ENABLED</b> and <b>DISABLED</b> , press the T3 button to confirm the option.

### Program Dose

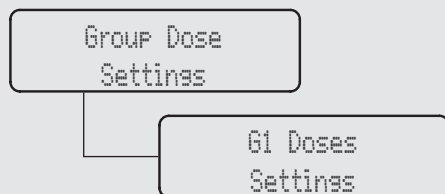


### Description

- This parameter allows the operator to program the amount of coffee (brewing amount) for each button on the keyboard.
- The brewing amount can be set in terms of time (sec. ) or pulses. This number refers to the number of pulses that the flowmeter sends to the CPU.
- Once programmed, the button remains lighted.
- It is possible to set the dose for both a short and a long shot on the same key.
- The setting of the first group is automatically copied to the subsequent groups.
- It is possible to set each key individually, in this case the dose of the first group will no longer be used.
- It is possible to copy the doses of any key to the others.

Display	Operating Procedure
<div> G1 Doses Exit </div>	<b>5</b> Press the button T3 to exit the submenu.
<div> Group Dose Exit </div>	<b>6</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.  <b>7</b> Press T1 or T2 to continue with the programming of the other parameters.

## “Barista” Programming

### Program Dose

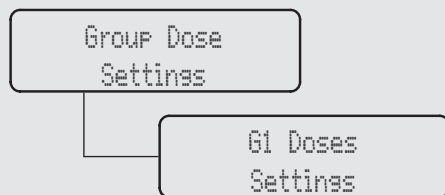


### Description

- This parameter allows the operator to program the amount of coffee (brewing amount) for each Selection Indicator.
- The brewing amount can be set in terms of time (sec.), pulses, mass or brewratio.
- Once programmed, the Selection Indicator remains lighted.
- It is possible to set the dose for both a short and a long shot on the same Selection Indicator.
- PULSE mode: control of doses in volume
- MASS mode: control of doses in mass
- BREW RATIO mode: ratio between the coffee powder and the weight of the drink

Display	Operating Procedure
<div>           94.4 00:00            95.5 95.1 SB         </div>	<b>1</b> When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.
<div>           Group Dose            Settings         </div>	<b>2</b> Press the button T1 or T2 to display the following menu:
<div>           G1 Doses            Settings         </div>	<b>3</b> Press the T3 button to start the doses programming procedure.
<div>           Group 1 Mode            PULSES         </div>	<b>4</b> Press the T3 button to access the menu, then navigate using T1 and T2 to choose between PULSES, MASS and BREWRATIO, press the T3 button to confirm the option.



## Program Dose

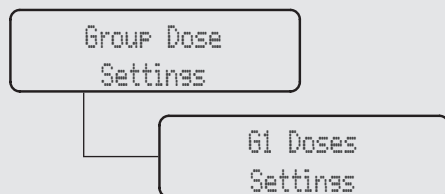


## Description

- This parameter allows the operator to program the amount of coffee (brewing amount) for each button on the keyboard.
- The brewing amount can be set in terms of time (sec. ) or pulses. This number refers to the number of pulses that the flowmeter sends to the CPU.
- Once programmed, the button remains lighted.
- It is possible to set the dose for both a short and a long shot on the same key.
- The setting of the first group is automatically copied to the subsequent groups.
- It is possible to set each key individually, in this case the dose of the first group will no longer be used.
- It is possible to copy the doses of any key to the others.

Display	Operating Procedure
<div>           G1B1 Dose 30 Pulses         </div>	<b>5</b> Press the button T1 or T2 to view the dose. Pressing the button T3, the dose value will blink. Use the button T1 or T2 to change the value, press the button T3 to confirm the desired value.
<div>           G1 Doses Exit         </div>	<b>6</b> Press the button T3 to exit the submenu.
<div>           Group Dose Exit         </div>	<b>7</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.  <b>8</b> Press T1 or T2 to continue with the programming of the other parameters.

# “Barista” Programming

## Program Dose

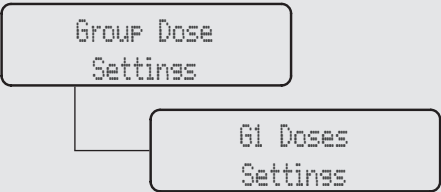

## Description

- This parameter allows the operator to program the amount of coffee (brewing amount) for each button on the keyboard.
- The brewing amount can be set in terms of time (sec. ) or pulses. This number refers to the number of pulses that the flowmeter sends to the CPU.
- Once programmed, the button remains lighted.
- It is possible to set the dose for both a short and a long shot on the same key.
- The setting of the first group is automatically copied to the subsequent groups.
- It is possible to set each key individually, in this case the dose of the first group will no longer be used.
- It is possible to copy the doses of any key to the others.

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<div>9</div> <div>Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.</div>

## Program Dose Scales

Group Dose  
Settings

G1 Doses  
Settings


### Description

- This parameter allows the operator to view and manually change each dose for each key.
- For greater accuracy and consistency of the doses, it is recommended that you set each key.

Display	Operating Procedure
LaMarzocco 00:00 CB 93.8°C SB	<b>1</b> When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.  <b>2</b> Press the button T1 or T2 to display the following menu:  <b>3</b> Press the T3 button to start the doses programming procedure.  <b>4</b> Press the T3 button to access the menu, then navigate using T1 and T2 to choose between PULSES, MASS and BREWRATIO, press the T3 button to confirm the option.
Group Dose Settings	
G1 Doses Settings	
Group 1 Mode BREWRATIO	

“Barista” Programming (only on ABR espresso machine models)

Program Dose Scales

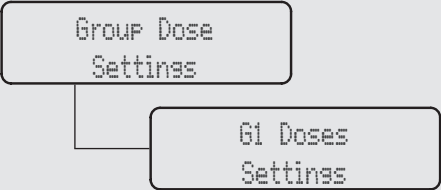

Description

- This parameter allows the operator to view and manually change each dose for each key.
- For greater accuracy and consistency of the doses, it is recommended that you set each key.

Display	Operating Procedure
<div>61B1 Brew Ratio 1:2.00</div>	5 Press the button T1 or T2 to view the dose of each key. Pressing the button T3, the dose value will blink. Use the button T1 or T2 to change the value, press the button T3 to confirm the desired value.
<div>G1 PF Mass 800.0g</div>	6 Press the button T1 or T2 to view the portafilter mass of each group. Pressing the button T3, the value will blink. Use the button T1 or T2 to change the value, press the button T3 to confirm the desired value.
<div>G1 Coffee Mass 14.0g</div>	7 Press the button T1 or T2 to view the coffee mass of each group. Pressing the button T3, the value will blink. Use the button T1 or T2 to change the value, press the button T3 to confirm the desired value.
<div>61B3 Mode CONTINUOUS</div>	8 Press the button T3 to enter the menu, then navigate using T1and T2 to choose between CONTINUOUS or 3 SEC RINS.

## Program Dose Scales

Group Dose  
Settings

G1 Doses  
Settings


### Description

- This parameter allows the operator to view and manually change each dose for each key.
- For greater accuracy and consistency of the doses, it is recommended that you set each key.

Display	Operating Procedure
<div>61 Doses Exit</div>	<b>9</b> Press the button T3 to exit the submenu.
<div>Group Dose Exit</div>	<b>10</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.  <b>11</b> Press T1 or T2 to continue with the programming of the other parameters.
<div>94.4 00:00 95.5 95.1 SB</div>	<b>12</b> Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.

# “Barista” Programming

## Program Dose

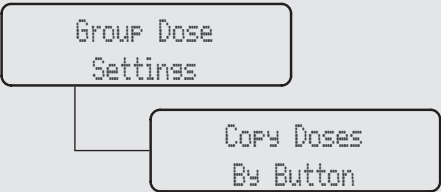

## Description

- This parameter allows the operator to copy the doses present of each key to the others.

Display	Operating Procedure
	<div>1 When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.</div> <div>2 Press the button T1 or T2 to display the following menu:</div> <div>3 Press the button T3 to start the dose copy procedure.</div> <div>4 Press the key whose setting you want to copy. Now all the keys will flash.</div>

## Program Dose

## Description

- This parameter allows the operator to copy the doses present of each key to the others.


Group Dose  
Settings

Copy Doses  
By Button

Display	Operating Procedure
<div>Push to Paste B5 to Exit</div>	<b>5</b> Press the key where you want to paste the previously copied setting. Successful programming is indicated by the fixed lighting of the key. It is possible to repeat this procedure on any key.
<div>Group Dose Exit</div>	<b>6</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.  <b>7</b> Press T1 or T2 to continue with the programming of the other parameters.
<div>94.4 00:00 95.5 95.1 SB</div>	<b>8</b> Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.

# “Barista” Programming

## Program Dose

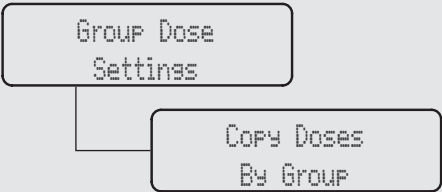

## Description

- This parameter allows the operator to copy the doses present of each group to the others.

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<div>1</div> <div>When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.</div> <div>2</div> <div>Press the button T1 or T2 to display the following menu:</div> <div>3</div> <div>Press the button T3 to start the dose copy procedure.</div> <div>4</div> <div>Press the key whose setting you want to copy. Now all the keys will flash.</div>
<div>GROUP Dose Settings</div>	
<div>COPY Doses By Group</div>	
<div>Select Group To Copy</div>	



## Program Dose

## Description

- This parameter allows the operator to copy the doses present of each group to the others.

Group Dose  
Settings

Copy Doses  
By Group


Display	Operating Procedure
<div>Push to Paste B5 to Exit</div>	<b>5</b> Press the key where you want to paste the previously copied setting. Successful programming is indicated by the fixed lighting of the key. It is possible to repeat this procedure on any group.
<div>Group Dose Exit</div>	<b>6</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.  <b>7</b> Press T1 or T2 to continue with the programming of the other parameters.
<div>94.4 00:00 95.5 95.1 SB</div>	<b>8</b> Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.

# “Barista” Programming

## Program Dose

### Description

- This parameter allows the operator to cancel all the doses set.

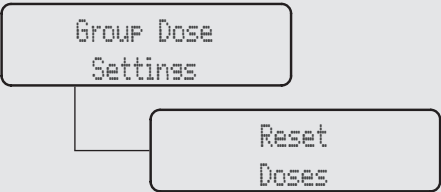

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<b>1</b> When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.
<div>Group Dose Settings</div>	<b>2</b> Press the button T1 or T2 to display the following menu:
<div>Reset Doses</div>	<b>3</b> Press the button T3 to confirm the procedure. Now all settings are cleared.
<div>Resetting Doses...</div>	
<div>Group Dose Exit</div>	<b>4</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.

Program Dose

Description

- This parameter allows the operator to cancel all the doses set.

Group Dose  
Settings

Reset  
Doses

Display

Operating Procedure

94.4 00:00  
95.5 95.1 SB


- 5** Press T1 or T2 to continue with the programming of the other parameters.
- 6** Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.

# “Barista” Programming

## Program Dose


### Description

- This parameter enables the operator to check of the flowmeter.

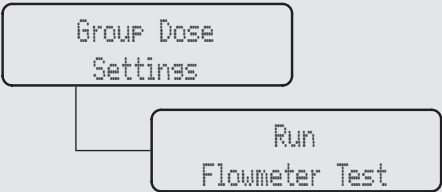

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	1 When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.
<div>Group Dose Settings</div>	2 Press the button T1 or T2 to display the following menu:
<div>Run Flowmeter Test</div>	3 Press the button T3 to confirm the procedure.
<div>Press G1B5 to continue</div>	
<div>Group Dose Exit</div>	
	4 Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.

### Backflush

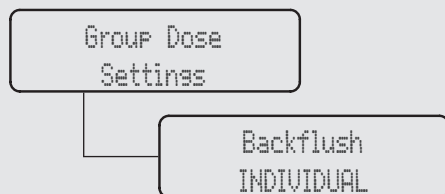


### Description

- This parameter allows the operator to carry out the washing of the coffee groups, in an automatic way, by running multiple cleaning cycles.
- This espresso machine has a group rinsing function (rinsing jets) integrated in the electronics.
- The rinsing procedure is provided to give the operator more flexibility and freedom with regard to this operation.
- Do not perform the cleaning procedure when other groups are dispensing coffee.
- The operator can choose between single-group rinsing mode and all-group rinsing mode, the latter by activating all groups together.

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<b>1</b> When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.
<div>Group Dose Settings</div>	<b>2</b> Press the button T1 or T2 to display the following menu:
<div>Backflush INDIVIDUAL</div>	<b>3</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select INDIVIDUAL or ALL TOGETHER, press the T3 button to confirm the option.
<div>GR1 Backflushing</div>	<b>4</b> When the espresso machine is on, to enable the washing procedure press and hold at the same time the buttons T1 and the continuous button. This activates the washing procedure of each group.

## “Barista” Programming

### Backflush

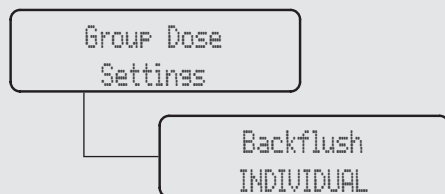

### Description

- This parameter allows the operator to carry out the washing of the coffee groups, in an automatic way, by running multiple cleaning cycles.
- This espresso machine has a group rinsing function (rinsing jets) integrated in the electronics.
- The rinsing procedure is provided to give the operator more flexibility and freedom with regard to this operation.
- Do not perform the cleaning procedure when other groups are dispensing coffee.
- The operator can choose between single-group rinsing mode and all-group rinsing mode, the latter by activating all groups together.

Display	Operating Procedure
<div>GROUP Dose Settings</div> <div>Backflush INDIVIDUAL</div> <div>GROUP Dose Exit</div>	<p><b>5</b> When activated, the water pump comes into operation, and the electric valve of the specific group being washed will turn on and off the cycle. There are about 10 preset cycles with an interval of 4 seconds. To manually stop the rinsing, press any key.</p>
	<p><b>6</b> <b>NOTE:</b> In order to properly rinse the groups, put a small amount of detergent in a blank portafilter basket and insert it in the group to be rinsed before activating the rinsing process.</p>
	<p><b>7</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.</p>



### WARNING



**MOST DETERGENTS CAUSE FOAMING DURING THE CLEANING PROCESS. THIS FOAM COLLECTS AT THE DRAIN BOX AND CAN PROHIBIT WASTE WATER FROM DRAINING PROPERLY.  
RINSING MULTIPLE GROUPS SIMULTANEOUSLY COULD CAUSE THE DRAIN BOX TO OVERFLOW.**

### Backflush

Group Dose  
Settings

Backflush  
INDIVIDUAL


### Description

- This parameter allows the operator to carry out the washing of the coffee groups, in an automatic way, by running multiple cleaning cycles.
- This espresso machine has a group rinsing function (rinsing jets) integrated in the electronics.
- The rinsing procedure is provided to give the operator more flexibility and freedom with regard to this operation.
- Do not perform the cleaning procedure when other groups are dispensing coffee.
- The operator can choose between single-group rinsing mode and all-group rinsing mode, the latter by activating all groups together.

Display	Operating Procedure
	<p><b>8</b> Press T1 or T2 to continue with the programming of the other parameters.</p>
<div> <div>94.400000</div> <div>95.500000 95.100000 SB</div> </div>	<p><b>9</b> Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.</p>

# “Barista” Programming

## Water Dose

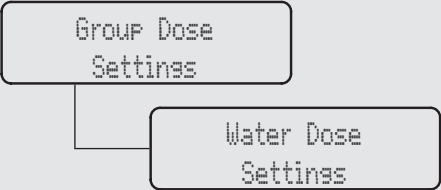

### Description

- This parameter allows the operator to program the amount of water (brewing amount) for the hot water button.
- This feature can be enabled or disabled.

Display	Operating Procedure
	<div>1 When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.</div> <div>2 Move between the parameters using the buttons T1 or T2 until the display shows:</div> <div>3 Press the T3 button to enter the menu.</div> <div>4 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>ENABLED</b> or <b>DISABLED</b>, press the T3 button to confirm the option.</div>



### Water Dose

### Description

- This parameter allows the operator to program the amount of water (brewing amount) for the hot water button.
- This feature can be enabled or disabled.


Group Dose  
Settings

Water Dose  
Settings

Display	Operating Procedure
<div>Program Water Dose</div>	<b>5</b> Desired dose can be programmed using hot water button. Press the T3 button to start dose programming procedure.
<div>Press Water Button To Stop</div> <div>Press Water Button To Program</div> <div>Water Dose Saved 5.0 Seconds</div>	<b>6</b> To program the brewing time, press the hot water button to start and then press it again to stop when the desired dose is achieved. Now the saved brewing time is displayed.
<div>61 Water Dose 5.0s</div>	<b>7</b> Press T1 or T2 to display the dose of the hot water button. Pressing the button T3, the dose value will blink. Use the button T1 or T2 to change the value, press the button T3 to confirm the desired value.

# “Barista” Programming

## Water Dose

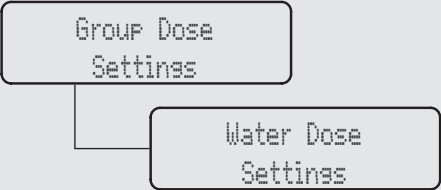

### Description

- This parameter allows the operator to program the amount of water (brewing amount) for the hot water button.
- This feature can be enabled or disabled.

Display	Operating Procedure
<div>Water Dose Exit</div>	<div>8 Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.</div>
	<div>9 Press T1 or T2 to continue with the programming of the other parameters.</div>
<div>94.4 00:00 95.5 95.1 SB</div>	<div>10 Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.</div>





### Coffee Boiler

#### Description

- This parameter allows the operator to enable/disable the coffee boiler.
- This parameter allows the operator to program the coffee boiler temperature. Each group can have a different programming.


Group Dose  
Settings

Coffee Boiler  
Settings

Display	Operating Procedure
	<b>1</b> When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.
	<b>2</b> Move between the parameters using the buttons T1 or T2 until the display shows:
	<b>3</b> Press the T3 button to enter the menu.
	<b>4</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>ENABLED</b> or <b>DISABLED</b> , press the T3 button to confirm the option. In the case of option enabled you can set the following parameters.

# “Barista” Programming

## Coffee Boiler

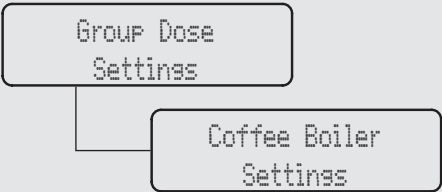


### Description

- This parameter allows the operator to enable/disable the coffee boiler.
- This parameter allows the operator to program the coffee boiler temperature. Each group can have a different programming.

Display	Operating Procedure
<div>CBI Temperature 93.1°C 93.3°C</div>	<div>5</div> <p>Press the T3 button to enter the menu, move with the buttons T1 and T2 to set the desired temperature, press the T3 button to confirm the value. In the case of espresso machine a multiple boilers you can set the temperature also on the coffee boiler. The temperature indicated on the left is the actual temperature of the group while the temperature on the right is the set temperature.</p>
<div>Coffee Boiler Exit</div>	<div>6</div> <p>Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.</p>
	<div>7</div> <p>Press T1 or T2 to continue with the programming of the other parameters.</p>
<div>94.4 00:00 95.5 95.1 SB</div>	<div>8</div> <p>Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.</p>

### Pre-Infusion or Pre-Brewing

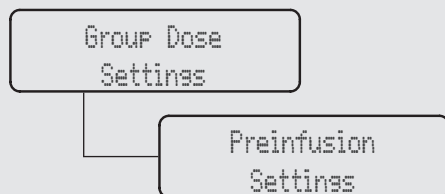

### Description

- This parameter allows the operator to program the time of pre-brewing of water with the coffee. Each group can have a different programming.
- Pre-brewing has only two values to be adjusted for each group. The time (in seconds) for which the brewing valve is open during the pre-brewing cycle and the time (in seconds) for which the brewing valve is closed during the


pre-brewing cycle; during this time the pump is active. Once the pre-brewing cycle is over, the normal brewing cycle will continue until the end.

- For an espresso machine composed of three groups, they are identified as Group 1, Group 2 and Group 3.

Display	Operating Procedure
	<b>1</b> When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.
	<b>2</b> Move between the parameters using the buttons T1 or T2 until the display shows:
	<b>3</b> Press the T3 button to enter the menu.
	<b>4</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>BY BUTTON</b> or <b>BY GROUP</b> , press the T3 button to confirm the option.

# “Barista” Programming

## Pre-Infusion or Pre-Brewing

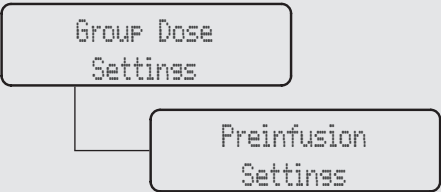

### Description


- This parameter allows the operator to program the time of pre-brewing of water with the coffee. Each group can have a different programming.
- Pre-brewing has only two values to be adjusted for each group. The time (in seconds) for which the brewing valve is open during the pre-brewing cycle and the time (in seconds) for which the brewing valve is closed during the pre-brewing cycle; during this time the pump is active. Once the pre-brewing cycle is over, the normal brewing cycle will continue until the end.
- For an espresso machine composed of three groups, they are identified as Group 1, Group 2 and Group 3.

Display	Operating Procedure
<div>Group 1 Pre-Inf 0s Wet</div> <div>Group 1 Pre-Inf 0s Hold</div> <div>Preinfusion Exit</div>	<p>Press T1 or T2 to select the group whose parameters you want to set.</p> <p><b>5</b> By pressing the T3 button the first value will blink. Use the buttons T1 and T2 to reach the value that you want to set, press T3 to confirm. Repeat this operation to set the second value.</p> <p><b>6</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.</p> <p><b>7</b> Press T1 or T2 to continue with the programming of the other parameters.</p> <p><b>8</b> Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.</p>
<div>94.4 00:00 95.5 95.1 SB</div>	

### Cup Warmer

#### Description


- This parameter allows the operator to enable or disable the cups heating function.
- This function is displayed only on the models of espresso machine equipped with this accessory.

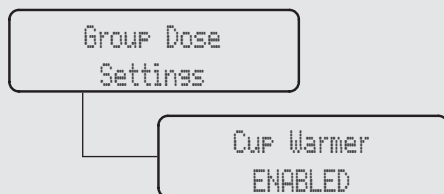

Display	Operating Procedure
	<b>1</b> When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.
	<b>2</b> Move between the parameters using the buttons T1 or T2 until the display shows:
	<b>3</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>ENABLED</b> or <b>DISABLED</b> , press the T3 button to confirm the option.
	<b>4</b> Press T1 or T2 to continue with the programming of the other parameters.

# “Barista” Programming

## Cup Warmer

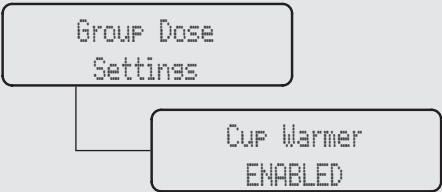

### Description

- This parameter allows the operator to enable or disable the cups heating function.
- This function is displayed only on the models of espresso machine equipped with this accessory.

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<div>5</div> <div>Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.</div>






## Water Quality

### Description

- This parameter allows the operator to view the TDS and water hardness values that are measured by the water probe at the inlet of the coffee machine.


Group Dose  
Settings

H2O Sensor - TDS  
000.0 PPM

Display	Operating Procedure
	<b>1</b> When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.
	<b>2</b> Move between the parameters using the buttons T1 or T2 until the display shows:
	<b>3</b> Using the buttons T1 and T2 to display the TDS value.
	<b>4</b> Press T1 or T2 to continue with the programming of the other parameters.

# “Barista” Programming

## Water Quality

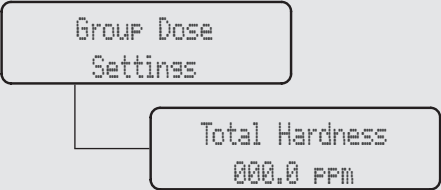

### Description


- This parameter allows the operator to view the TDS and water hardness values that are measured by the water probe at the inlet of the coffee machine.

Display	Operating Procedure
	<div>1</div> When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.  <div>2</div> Move between the parameters using the buttons T1 or T2 until the display shows:  <div>3</div> Using the buttons T1 and T2 to display the Total Hardness value.  <div>4</div> Press T1 or T2 to continue with the programming of the other parameters.

Gateway

Description


- This parameter allows the operator to connect the coffee machine to the WiFi connection.

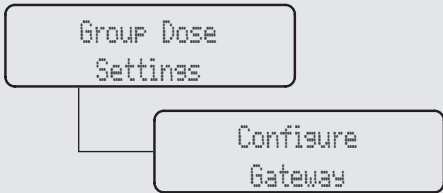

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<div>1</div> <div>When the espresso machine is turned on, press and hold the T3 button to access the “Barista” programming. After about 5 seconds the following screen is displayed.</div>
<div>Group Dose Settings</div>	<div>2</div> <div>Move between the parameters using the buttons T1 or T2 until the display shows:</div>
<div>Configure Gateway</div>	<div>3</div> <div>Press the T3 button to enter the menu.</div>
<div>Gateway Unlocked</div> <div>Press B3 to Exit</div>	<div>4</div> <div>The Gateway is ready to connect to the WiFi network.</div>

# “Barista” Programming

## Gateway

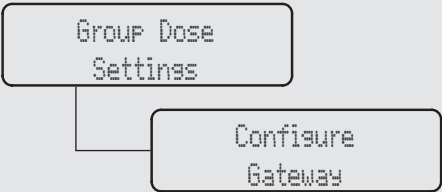

## Description

- This parameter allows the operator to connect the coffee machine to the WiFi connection.

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<div>5 Press T1 or T2 to continue with the programming of the other parameters.</div> <div>6 Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.</div>

Exit Menu

Description

- This parameter allows the operator to exit the “Barista” programming and return to the normal use of the espresso machine.

Group Dose  
Settings

Menu  
Press B3 to Exit

Display	Operating Procedure
<div>Menu Press B3 to Exit</div>	<div>1</div> <div>Press the T3 button to exit the “Barista” programming and return to the normal use of the espresso machine.</div>
<div>94.4      00:00 95.5 95.1 SB</div>	<div>2</div> <div>Alternatively, you can exit the “Barista” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</div>

# “Technical” Programming

## Language

### Description

- This parameter allows the technician to change the language of the display.



Display	Operating Procedure
	<b>1</b> When the espresso machine is turned on, press and hold the T3 button. After about 10 seconds the following screen is displayed.
	<b>2</b> Enter the technician password using the buttons T1, T2 and T3. After the acceptance, the following screen is displayed.
	<b>3</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select a language , press the T3 button to confirm the option.
	<b>4</b> Press T1 or T2 to continue with the programming of the other parameters.

Language

Description

- This parameter allows the technician to change the language of the display.

Enter Password  
\*\*\*\*\*

Language  
ENGLISH

Display

Operating Procedure

Menu  
Press B3 to Exit

**5** To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.

94.4      00:00  
95.5   95.1   SB

**6** Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.




## “Technical” Programming

### Temperature Measurement Units

#### Description

- This parameter allows the technician to change the temperature display from degrees Celsius to degrees Fahrenheit and vice versa.




Display	Operating Procedure
	<b>1</b> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
	<b>2</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select an option, press the T3 button to confirm the option.
	<b>3</b> Press T1 or T2 to continue with the programming of the other parameters.
	<b>4</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.



Temperature Measurement Units


Description




- This parameter allows the technician to change the temperature display from degrees Celsius to degrees Fahrenheit and vice versa.

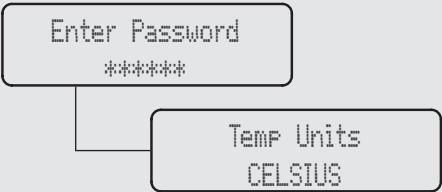

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<div>5</div> <div>Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</div>

## “Technical” Programming

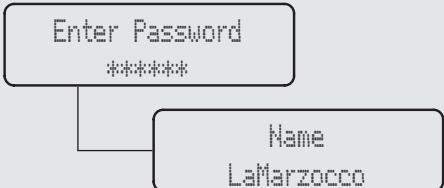Name	Description
 <p>The diagram illustrates the sequence of screens during the technical programming process. It starts with a box labeled 'Enter Password' with '*****' below it. A line connects this box to another box labeled 'Name' with 'LaMarzocco' below it.</p>	<ul style="list-style-type: none"> <li>This parameter allows the technician to program a 16 character user name.</li> <li>The user name is displayed continuously on the display on the second line.</li> </ul>

Display	Operating Procedure
	<b>1</b> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
	<b>2</b> Press the T3 button to enter the menu, use the buttons T1 and T2 to set the desired value, press the T3 button to confirm the value and proceed with writing.
	<b>3</b> Press T1 or T2 to continue with the programming of the other parameters.
	<b>4</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.

Name

Description


- This parameter allows the technician to program a 16 character user name.
- The user name is displayed continuously on the display on the second line.



Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<div>5</div> <div>Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</div>

## “Technical” Programming

### Program Dose

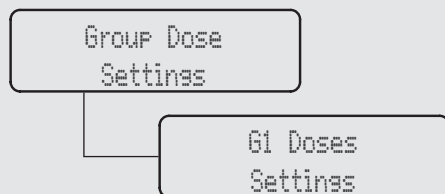

### Description

- This parameter allows the operator to program the amount of coffee (brewing amount) for each Selection Indicator.
- The brewing amount can be set in terms of time (sec.), pulses, mass or brewratio.
- Once programmed, the Selection Indicator remains lighted.
- It is possible to set the dose for both a short and a long shot on the same Selection Indicator.
- PULSE mode: control of doses in volume
- MASS mode: control of doses in mass
- BREW RATIO mode: ratio between the coffee powder and the weight of the drink

Display	Operating Procedure
	<b>1</b> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
	<b>2</b> Press the button T1 or T2 to display the following menu:
	<b>3</b> Press the T3 button to start the doses programming procedure.
	<b>4</b> Press the T3 button to access the menu, then navigate using T1 and T2 to choose between <b>ENABLED</b> and <b>DISABLED</b> , press the T3 button to confirm the option.

Program Dose

Description

- This parameter allows the operator to program the amount of coffee (brewing amount) for each button on the keyboard.
- The brewing amount can be set in terms of time (sec. ) or pulses. This number refers to the number of pulses that the flowmeter sends to the CPU.
- Once programmed, the button remains lighted.
- It is possible to set the dose for both a short and a long shot on the same key.
- The setting of the first group is automatically copied to the subsequent groups.
- It is possible to set each key individually, in this case the dose of the first group will no longer be used.
- It is possible to copy the doses of any key to the others.

Group Dose  
Settings

G1 Doses  
Settings

Display

Operating Procedure

G1 Doses  
Exit

**5** Press the button T3 to exit the submenu.


Group Dose  
Exit

**6** Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.

**7** Press T1 or T2 to continue with the programming of the other parameters.

## “Technical” Programming

### Program Dose

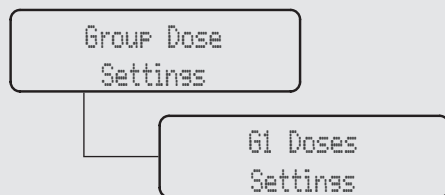

### Description


- This parameter allows the technician to program the amount of coffee (brewing amount) for each Selection Indicator.
- The brewing amount can be set in terms of time (sec.), pulses, mass or brewratio.
- Once programmed, the Selection Indicator remains lighted.
- It is possible to set the dose for both a short and a long shot on the same Selection Indicator.
- PULSE mode: control of doses in volume
- MASS mode: control of doses in mass
- BREW RATIO mode: ratio between the coffee powder and the weight of the drink

Display	Operating Procedure
Enter Password *****	<ol style="list-style-type: none"> <li>1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.</li> <li>2 Press the button T1 or T2 to display the following menu:</li> <li>3 Press the T3 button to start the doses programming procedure.</li> <li>4 Press the T3 button to access the menu, then navigate using T1 and T2 to choose between PULSES, MASS and BREWRATIO, press the T3 button to confirm the option.</li> </ol>
GROUP Dose Settings	
G1 Doses Settings	
GROUP 1 Mode PULSES	

Program Dose

Description


- This parameter allows the technician to program the amount of coffee (brewing amount) for each button on the keyboard.
- The brewing amount can be set in terms of time (sec. ) or pulses. This number refers to the number of pulses that the flowmeter sends to the CPU.
- Once programmed, the button remains lighted.
- It is possible to set the dose for both a short and a long shot on the same key.
- The setting of the first group is automatically copied to the subsequent groups.
- It is possible to set each key individually, in this case the dose of the first group will no longer be used.
- It is possible to copy the doses of any key to the others.

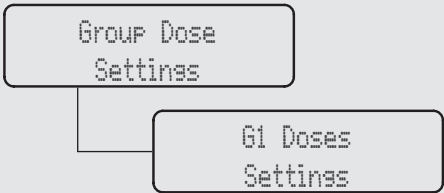

Display	Operating Procedure
<div>61B1 Dose 30 Pulses</div>	<div>5</div> <div>Press the button T1 or T2 to view the dose. Pressing the button T3, the dose value will blink. Use the button T1 or T2 to change the value, press the button T3 to confirm the desired value.</div>
<div>G1 Doses Exit</div>	<div>6</div> <div>Press the button T3 to exit the submenu.</div>
<div>Group Dose Exit</div>	<div>7</div> <div>Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Technical” programming.</div> <div>8</div> <div>Press T1 or T2 to continue with the programming of the other parameters.</div>

# “Technical” Programming

## Program Dose

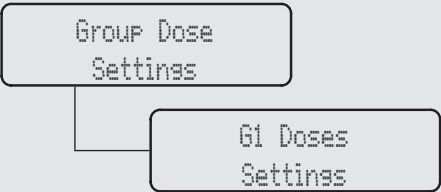

## Description

- This parameter allows the technician to program the amount of coffee (brewing amount) for each button on the keyboard.
- The brewing amount can be set in terms of time (sec. ) or pulses. This number refers to the number of pulses that the flowmeter sends to the CPU.
- Once programmed, the button remains lighted.
- It is possible to set the dose for both a short and a long shot on the same key.
- The setting of the first group is automatically copied to the subsequent groups.
- It is possible to set each key individually, in this case the dose of the first group will no longer be used.
- It is possible to copy the doses of any key to the others.

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<div>9</div> <div>Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.</div>



## Program Dose Scales

Group Dose  
Settings

G1 Doses  
Settings


### Description

- This parameter allows the technician to view and manually change each dose for each key.
- For greater accuracy and consistency of the doses, it is recommended that you set each key.

Display	Operating Procedure
Enter Password *****	<b>1</b> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
Group Dose Settings	<b>2</b> Press the button T1 or T2 to display the following menu:
G1 Doses Settings	<b>3</b> Press the T3 button to start the doses programming procedure.
Group 1 Mode BREWRATIO	<b>4</b> Press the T3 button to access the menu, then navigate using T1 and T2 to choose between PULSES, MASS and BREWRATIO, press the T3 button to confirm the option.

“Technical” Programming (only on ABR espresso machine models)

Program Dose Scales

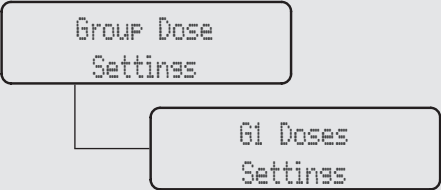

Description

- This parameter allows the technician to view and manually change each dose for each key.
- For greater accuracy and consistency of the doses, it is recommended that you set each key.

Display	Operating Procedure
<div>61B1 Brew Ratio 1:2.00</div>	5 Press the button T1 or T2 to view the dose of each key. Pressing the button T3, the dose value will blink. Use the button T1 or T2 to change the value, press the button T3 to confirm the desired value.
<div>G1 PF Mass 800.0g</div>	6 Press the button T1 or T2 to view the portafilter mass of each group. Pressing the button T3, the value will blink. Use the button T1 or T2 to change the value, press the button T3 to confirm the desired value.
<div>G1 Coffee Mass 14.0g</div>	7 Press the button T1 or T2 to view the coffee mass of each group. Pressing the button T3, the value will blink. Use the button T1 or T2 to change the value, press the button T3 to confirm the desired value.
<div>61B3 Mode CONTINUOUS</div>	8 Press the button T3 to enter the menu, then navigate using T1and T2 to choose between CONTINUOUS or 3 SEC RINS.




## Program Dose Scales

Group Dose  
Settings

G1 Doses  
Settings


### Description

- This parameter allows the technician to view and manually change each dose for each key.
- For greater accuracy and consistency of the doses, it is recommended that you set each key.

Display	Operating Procedure
	<b>9</b> Press the button T3 to exit the submenu.
	<b>10</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Technical” programming.
	<b>11</b> Press T1 or T2 to continue with the programming of the other parameters.
	<b>12</b> Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.

“Technical” Programming (only on ABR espresso machine models)

Program Dose

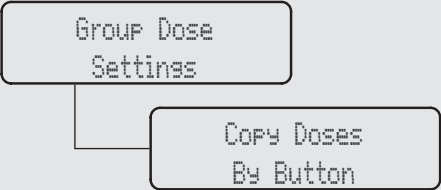

- Description
- This parameter allows the technician to copy the doses present of each key to the others.

Display	Operating Procedure
Enter Password *****	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
GROUP Dose Settings	2 Press the button T1 or T2 to display the following menu:
COPY Doses By Button	3 Press the button T3 to start the dose copy procedure.
Push Button To COPY	4 Press the key whose setting you want to copy. Now all the keys will flash.

## Program Dose

### Description

- This parameter allows the technician to copy the doses present of each key to the others.


Group Dose  
Settings

Copy Doses  
By Button

Display	Operating Procedure
<div>Push to Paste B5 to Exit</div>	<b>5</b> Press the key where you want to paste the previously copied setting. Successful programming is indicated by the fixed lighting of the key. It is possible to repeat this procedure on any key.
<div>Group Dose Exit</div>	<b>6</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.
	<b>7</b> Press T1 or T2 to continue with the programming of the other parameters.
<div>94.4 00:00 95.5 95.1 SB</div>	<b>8</b> Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.

# “Technical” Programming

## Program Dose

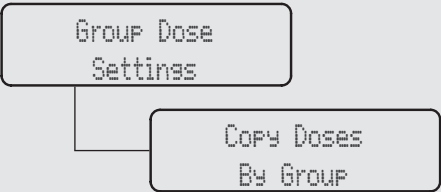

## Description

- This parameter allows the technician to copy the doses present of each group to the others.

Display	Operating Procedure
Enter Password *****	<div>1</div> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.  <div>2</div> Press the button T1 or T2 to display the following menu:  <div>3</div> Press the button T3 to start the dose copy procedure.  <div>4</div> Press the key whose setting you want to copy. Now all the keys will flash.
GROUP Dose Settings	
COPY Doses By Group	
Select Group To Copy	

Program Dose

Description

- This parameter allows the technician to copy the doses present of each group to the others.

Group Dose  
Settings

Copy Doses  
By Group


Display	Operating Procedure
<div>Push to Paste B5 to Exit</div>	<div>5</div> <div>Press the key where you want to paste the previously copied setting. Successful programming is indicated by the fixed lighting of the key. It is possible to repeat this procedure on any group.</div>
<div>Group Dose Exit</div>	<div>6</div> <div>Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Technical” programming.</div> <div>7</div> <div>Press T1 or T2 to continue with the programming of the other parameters.</div>
<div>94.4 00:00 95.5 95.1 SB</div>	<div>8</div> <div>Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.</div>

# “Technical” Programming

## Program Dose

### Description

- This parameter allows the technician to cancel all the doses set.

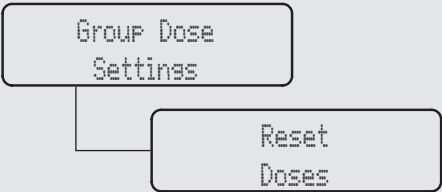

Display	Operating Procedure
<div>Enter Password *****</div>	<div>1</div> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.  <div>2</div> Press the button T1 or T2 to display the following menu:  <div>3</div> Press the button T3 to confirm the procedure. Now all settings are cleared.  <div>4</div> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Technical” programming.
<div>GROUP Dose Settings</div>	
<div>Reset Doses</div>	
<div>Resetting Doses...</div>	
<div>GROUP Dose Exit</div>	



## Program Dose

### Description

- This parameter allows the technician to cancel all the doses set.

Group Dose  
Settings

Reset  
Doses


Display	Operating Procedure
<div> <div>94.400:00</div> <div>95.595.1SB</div> </div>	<p><b>5</b> Press T1 or T2 to continue with the programming of the other parameters.</p> <p><b>6</b> Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.</p>

# “Technical” Programming

## Program Dose

### Description

- This parameter enables the technician to check of the flowmeter.

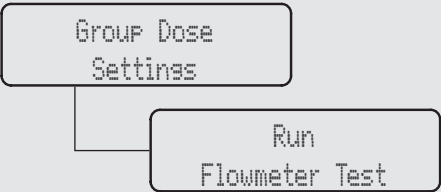

Display	Operating Procedure
	<div>1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.</div> <div>2 Press the button T1 or T2 to display the following menu:</div> <div>3 Press the button T3 to confirm the procedure.</div> <div>4 Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Barista” programming.</div>

Prop. Steam

Description

- This parameter allows the technician to calibrate the potentiometer, adjusting the steam delivery starting and end point.

Enter Password  
\*\*\*\*\*

Prop. Steam  
Settings

Display	Operating Procedure
Enter Password *****	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
Prop. Steam Settings	2 Press the T3 button to enter the menu.
Calibrate Left Steam	3 Press T3 button to start calibrating the potentiometer of the left-hand steam wand.
Lower L Steam & Press Enter	4 Operate the left-hand steam lever, fully lowering it, then press the T3 button.

# “Technical” Programming

## Prop. Steam

Enter Password  
\*\*\*\*\*



Prop. Steam  
Settings

### Description

- This parameter allows the technician to calibrate the potentiometer, adjusting the steam delivery starting and end point.

Display	Operating Procedure
Raise L Steam & Press Enter	5 Operate the left-hand steam lever, fully raising it, then press the T3 button.
Calibrate Right Steam	6 Press the T3 button to start calibrating the potentiometer of the right-hand steam wand.
Lower R Steam & Press Enter	7 Operate the right-hand steam lever, fully lowering it, then press the T3 button.
Raise R Steam & Press Enter	8 Operate the right-hand steam lever, fully raising it, then press the T3 button.

Prop. Steam

Description

- This parameter allows the technician to calibrate the potentiometer, adjusting the steam delivery starting and end point.

Enter Password  
\*\*\*\*\*

Prop. Steam  
Settings

Display	Operating Procedure
<div>Test Steam Pot</div> <div>Left: 52% 2.7U Right: 30% 1.7U</div>	<div>9</div> <div>To check the correct operation of the mechanical potentiometer, operate the left and right steam levers.</div>
<div>Prop. Steam Exit</div>	<div>10</div> <div>Press the T3 button to return to the “Technical” programming.</div> <div>11</div> <div>Press T1 or T2 to continue with the programming of the other parameters.</div>
<div>Menu Press B3 to Exit</div>	<div>12</div> <div>To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</div>

# “Technical” Programming

## Prop. Steam

Enter Password  
\*\*\*\*\*

Prop. Steam  
Settings

### Description

- This parameter allows the technician to calibrate the potentiometer, adjusting the steam delivery starting and end point.

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<div>13</div> <p>Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</p>

Backflush

Description

- This parameter allows the operator to carry out the washing of the coffee groups, in an automatic way, by running multiple cleaning cycles.
- This espresso machine has a group rinsing function (rinsing jets) integrated in the electronics.
- The rinsing procedure is provided to give the operator more flexibility and freedom with regard to this operation.
- Do not perform the cleaning procedure when other groups are dispensing coffee.
- The operator can choose between single-group rinsing mode and all-group rinsing mode, the latter by activating all groups together.

Enter Password  
\*\*\*\*\*

Backflush  
INDIVIDUAL

Display	Operating Procedure
<div>Enter Password *****</div>	<div>1</div> <p>After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.</p>
<div>Backflush INDIVIDUAL</div>	<div>2</div> <p>Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select INDIVIDUAL or ALL TOGETHER, press the T3 button to confirm the option.</p>
<div>GR1 Backflushins</div>	<div>3</div> <p>When the espresso machine is on, to enable the washing procedure press and hold at the same time the buttons T1 and the continuous button.</p> <p>This activates the washing procedure of each group.</p>
	<div>4</div> <p>When activated, the water pump comes into operation, and the electric valve of the specific group being washed will turn on and off the cycle. There are about 10 preset cycles with an interval of 4 seconds. To manually stop the rinsing, press any key.</p>

## “Technical” Programming

### Backflush

Enter Password  
\*\*\*\*\*

Backflush  
INDIVIDUAL

### Description

- This parameter allows the operator to carry out the washing of the coffee groups, in an automatic way, by running multiple cleaning cycles.
- This espresso machine has a group rinsing function (rinsing jets) integrated in the electronics.
- The rinsing procedure is provided to give the operator more flexibility and freedom with regard to this operation.
- Do not perform the cleaning procedure when other groups are dispensing coffee.
- The operator can choose between single-group rinsing mode and all-group rinsing mode, the latter by activating all groups together.

Display	Operating Procedure
	<p><b>5</b> <b>NOTE:</b> In order to properly rinse the groups, put a small amount of detergent in a blank portafilter basket and insert it in the group to be rinsed before activating the rinsing process.</p>
	<p><b>6</b> Press T1 or T2 to continue with the programming of the other parameters.</p>
<p>Menu Press B3 to Exit</p>	<p><b>7</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</p>



### WARNING



**MOST DETERGENTS CAUSE FOAMING DURING THE CLEANING PROCESS. THIS FOAM COLLECTS AT THE DRAIN BOX AND CAN PROHIBIT WASTE WATER FROM DRAINING PROPERLY.  
RINSING MULTIPLE GROUPS SIMULTANEOUSLY COULD CAUSE THE DRAIN BOX TO OVERFLOW.**



Backflush

Enter Password  
\*\*\*\*\*

Backflush  
INDIVIDUAL

Description

- This parameter allows the operator to carry out the washing of the coffee groups, in an automatic way, by running multiple cleaning cycles.
- This espresso machine has a group rinsing function (rinsing jets) integrated in the electronics.
- The rinsing procedure is provided to give the operator more flexibility and freedom with regard to this operation.
- Do not perform the cleaning procedure when other groups are dispensing coffee.
- The operator can choose between single-group rinsing mode and all-group rinsing mode, the latter by activating all groups together.

Display

94.4      00:00  
95.5   95.1   SB

Operating Procedure


8 Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.

# “Technical” Programming

## Crono Function

### Description

- When enabled, this parameter displays a timer that times each shot.
- The timer is reset each time a button on the keypad is pressed.
- If enabled, the Chrono function is permanently displayed during brewing, while during wait state it alternates with the programmable name.

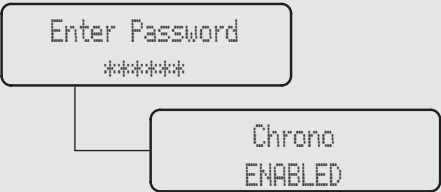

Display	Operating Procedure
	<b>1</b> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
	<b>2</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>ENABLED</b> or <b>DISABLED</b> , press the T3 button to confirm the option.
	<b>3</b> In the case of active option ( <b>TIME</b> or <b>DOSE</b> ) the display shown to the side appears.
	<b>4</b> Press T1 or T2 to continue with the programming of the other parameters.

Crono Function

Description

- When enabled, this parameter displays a timer that times each shot.
- The timer is reset each time a button on the keypad is pressed.
- If enabled, the Chrono function is permanently displayed during brewing, while during wait state it alternates with the programmable name.

Enter Password  
\*\*\*\*\*

Chrono  
ENABLED

Display	Operating Procedure
<div>Menu Press B3 to Exit</div>	<div>5</div> <div>To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</div>
<div>94.4      00:00 95.5   95.1   SB</div>	<div>6</div> <div>Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</div>

## “Technical” Programming

### Crono Function

#### Description

- When enabled, this parameter displays a timer that times each shot.
- The timer is reset each time a button on the keypad is pressed.
- If enabled, the Chrono function is permanently displayed during brewing, while during wait state it alternates with the programmable name.

Enter Password  
\*\*\*\*\*

Chrono Info Type  
DOSE

Display	Operating Procedure
<p>Enter Password *****</p>	<p><b>1</b> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.</p>
<p>Chrono Info Type DOSE</p>	<p><b>2</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select an option (TIME/DOSE), press the T3 button to confirm the option.</p> <p><b>3</b> Press T1 or T2 to continue with the programming of the other parameters.</p>
<p>Menu Press B3 to Exit</p>	<p><b>4</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</p>

Water Dose

Description

- This parameter allows the operator to program the amount of water (brewing amount) for the hot water button.
- This feature can be enabled or disabled.

Enter Password  
\*\*\*\*\*

Water Dose  
Settings


Display	Operating Procedure
Enter Password *****	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
Water Dose Settings	2 Press the T3 button to enter the menu.
Water Dose WITH PUMP	3 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select WITH PUMP or WITHOUT PUMP, press the T3 button to confirm the option.
Water Dose ENABLED	4 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select ENABLED or DISABLED, press the T3 button to confirm the option.

## “Technical” Programming

### Water Dose

### Description

- This parameter allows the operator to program the amount of water (brewing amount) for the hot water button.
- This feature can be enabled or disabled.

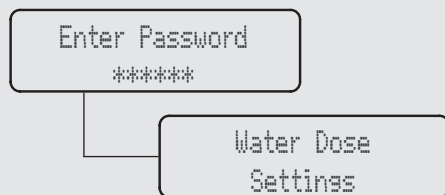

Display	Operating Procedure
<div>Program Water Dose</div>	<b>5</b> Desired dose can be programmed using hot water button. Press the T3 button to start dose programming procedure.
<div>Program Water Dose</div> <div>Press Water Button To Stop</div> <div>Press Water Button To Program</div> <div>Water Dose Saved 5.0 Seconds</div>	<b>6</b> To program the brewing time, press the hot water button to start and then press it again to stop when the desired dose is achieved.  Now the saved brewing time is displayed.
<div>GI Water Dose 5.0s</div>	<b>7</b> Press T1 or T2 to display the dose of the hot water button. Pressing the button T3 button, the dose value will blink. Use the button T1 or T2 to change the value, press the button T3 button to confirm the desired value.

Water Dose

Description

- This parameter allows the operator to program the amount of water (brewing amount) for the hot water button.
- This feature can be enabled or disabled.


Enter Password  
\*\*\*\*\*

Water Dose  
Settings

Display	Operating Procedure
<div>Water Dose Exit</div>	<div>8 Press the T3 button to return to the “Technical” programming.</div>
	<div>9 Press T1 or T2 to continue with the programming of the other parameters.</div>
<div>Menu Press B3 to Exit</div>	<div>10 To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</div>
<div>94.4 00:00 95.5 95.1 SB</div>	<div>12 Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</div>

## “Technical” Programming (only on ABR espresso machine models)

### Program Scales

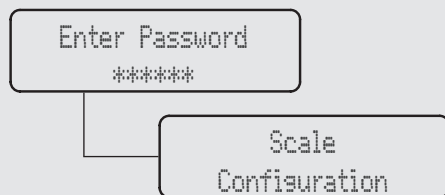

### Description

- This parameter enables the technician to set some scale parameters like:
  - Enabling/disabling the offset parameter;
  - Setting the weight reading time;
  - Calibrating the scales;
  - Updating the scale software.

Display	Operating Procedure
<div>Enter Password *****</div>	<b>1</b> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Scale Configuration</div>	<b>2</b> Press the T3 button to enter the menu.
<div>Auto Offset ENABLED</div>	<b>3</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>ENABLED</b> or <b>DISABLED</b> , press the T3 button to confirm the option.
<div>Scale Tare Time 3s</div>	<b>4</b> Press the T3 button to enter the menu, navigate the parameters using the buttons T1 and T2 to set the desired value. This parameter is common to all groups.



**Program Scales****Description**

Enter Password  
\*\*\*\*\*


Scale  
Configuration

- This parameter enables the technician to set some scale parameters like:
  - Enabling/disabling the offset parameter;
  - Setting the weight reading time;
  - Calibrating the scales;
  - Updating the scale software.

Display	Operating Procedure
<div>G1 Scale PRESENT</div>	<b>5</b> This parameter indicates that the scale is properly connected; navigate using the T1 and T2 buttons to display the next menu.
<div>Calibrate G1 Scale</div>	<b>6</b> Press the T3 button to start the calibration procedure.
<div>Empty G1 Scale And Press Enter</div> <div>Place 100s on G1 And Press Enter</div>	Remove any object from the scale, then press the T3 button to confirm. <b>7</b> Place the reference weights onto the scale, then press the T3 button to confirm. At the end of the process, the self-calibration values or a confirmation message are displayed. Repeat this operation for each group.
<div>G1 Scale: v0.0,0 Upgrade to 0.0,0</div>	<b>8</b> Press T2 to proceed with setting and press the T3 button to update the scale firmware if necessary.

“Technical” Programming (only on ABR espresso machine models)

Program Scales

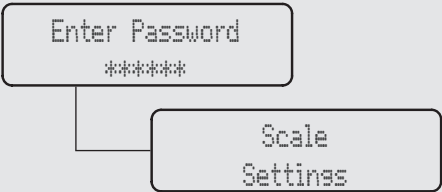

Description

- This parameter enables the technician to set some scale parameters like:
  - Enabling/disabling the offset parameter;
  - Setting the weight reading time;
  - Calibrating the scales;
  - Updating the scale software.

Display	Operating Procedure
<div>Start Scale Testing</div> <div>0.0 0.0 0.0 Enter to Exit</div>	<b>9</b> Press the T3 button to enter the menu and place the reference weights onto the scale.
<div>View Scale Versions</div>	<b>10</b> Press the T3 button to enter the menu.
<div>G1 Scale HW0.0 FW0.0.0</div>	<b>11</b> Use T1 and T2 to display the hardware and software version installed.
<div>View Versions Exit</div>	<b>12</b> Press the T3 button to exit the submenu

**Program Scales****Description**

- This parameter enables the technician to set some scale parameters like:
  - Enabling/disabling the offset parameter;
  - Setting the weight reading time;
  - Calibrating the scales;
  - Updating the scale software.

Enter Password

\*\*\*\*\*

Scale  
Settings


Display	Operating Procedure
<div>Scale Exit</div>	<p><b>13</b> Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Technical” programming.</p>
	<p><b>14</b> Press T1 or T2 to continue with the programming of the other parameters.</p>
<div>94.4 00:00 95.5 95.1 SB</div>	<p><b>15</b> Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</p>

# “Technical” Programming

## Solenoid Test

### Description

- This parameter allows the technician to verify the proper work of all solenoid valves.

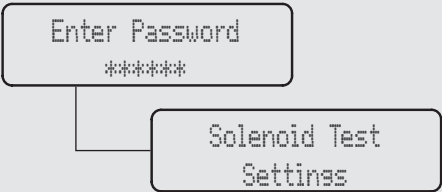

Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Solenoid Test Settings</div>	2 Press the T3 button to enter the menu.
<div>Test Group G1 Solenoid</div> <div>Testing Solenoid ...</div>	3 Press the T3 button to start verifying the proper work of coffee group solenoid valve.
<div>Power:12.00W Opened: VES</div> <div>Peak: 9.20W Trough: 7.50W</div>	4 These values indicate the proper work of coffee group solenoid valve.

Solenoid Test

Description

- This parameter allows the technician to verify the proper work of all solenoid valves.

Enter Password  
\*\*\*\*\*

Solenoid Test  
Settings


Display	Operating Procedure
<div>Test Hot Water Solenoid</div> <div>Testing Solenoid ...</div>	<b>4</b> Press the T3 button to start verifying the proper work of hot water solenoid valve.
<div>Power:12.00W Opened: YES</div> <div>Peak: 9.20W Trough: 7.50W</div>	<b>5</b> These values indicate the proper work of coffee group solenoid valve.
<div>Test Autofill Solenoid</div> <div>Testing Solenoid ...</div>	<b>6</b> Press the T3 button to start verifying the proper work of autofill solenoid valve.
<div>Power:12.00W Opened: YES</div> <div>Peak: 9.20W Trough: 7.50W</div>	<b>7</b> These values indicate the proper work of coffee group solenoid valve.

# “Technical” Programming

## Solenoid Test

### Description

- This parameter allows the technician to verify the proper work of all solenoid valves.

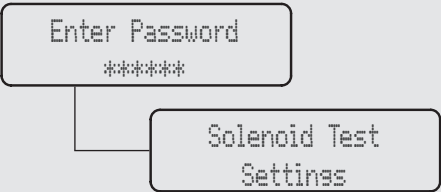

Display	Operating Procedure
<div>Solenoid Test Exit</div>	<div>8</div> <div>Press T1 or T2 until the display shows the exit menu, press the T3 button to return to the “Technical” programming.</div>
	<div>9</div> <div>Press T1 or T2 to continue with the programming of the other parameters.</div>
<div>94.4 00:00 95.5 95.1 SB</div>	<div>10</div> <div>Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</div>


Coffee Boiler

Description

- This parameter enables the technician to set various parameters of the coffee boiler.
- The temperature of the boiler is measured at the most critical point in the boiler where temperature fluctuation is the greatest.
- The temperature of the water exiting the group head is held constant by means of the mass of the group casting. Even

though the temperature of the boiler may vary slightly, the temperature of the water exiting the group is constant.

- To properly calibrate the temperature of any espresso machine it is import to measure the temperature of the water exiting the group by means of an external temperature measuring device. The difference of the display temperature and the measured temperature may be compensated by use of the “Coffee T. Offset” parameter.

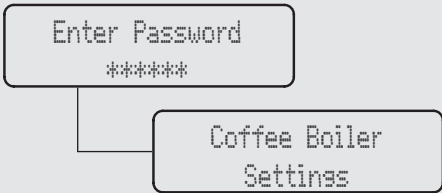

Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Coffee Boiler Settings</div>	2 Press the T3 button to enter the menu.
<div>Coffee Boiler 1 ENABLED</div>	3 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>ENABLED</b> or <b>DISABLED</b> , press the T3 button to confirm the option.
<div>CB1 Temperature 93.1°C 93.3°C</div>	4 Press the T3 button to enter the menu, move with the buttons T1 and T2 to set the desired temperature, press the T3 button to confirm the value. In the case of espresso machine with multiple boilers you can set the temperature also on the coffee boiler. The temperature indicated on the left is the actual temperature of the group while the temperature on the right is the set temperature.

## “Technical” Programming

### Coffee Boiler



### Description

- The OFFSET parameter is used to calibrate the coffee boiler temperature system to ensure the display temperature accurately represents the temperature of the water exiting the group head.
- This parameter is preset at the factory based upon initial tests of this espresso machine.
- It is not recommended that this number is changed. Changes to this parameter can cause unexpected results.
- It is important to write down this value before making changes to be sure you can return to the factory programming if unexpected results occur. Each machine may have a different value as it is set individually.

Display	Operating Procedure
<div>CB1 Offset 3.0°C</div>	<b>5</b> Press the T3 button to enter the menu, move with the buttons T1 and T2 to set the desired temperature, press the T3 button to confirm the value. In the case of espresso machine with 4 groups you can set this value also on the coffee boiler 2.
<div>Coffee Boiler Exit</div>	<b>6</b> Press the T3 button to return to the “Technical” programming.
	<b>7</b> Press T1 or T2 to continue with the programming of the other parameters.
<div>Menu Press B3 to Exit</div>	<b>8</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.



Coffee Boiler

Description

Enter Password  
\*\*\*\*\*

Coffee Boiler  
Settings

- The OFFSET parameter is used to calibrate the coffee boiler temperature system to ensure the display temperature accurately represents the temperature of the water exiting the group head.
- This parameter is preset at the factory based upon initial tests of this espresso machine.
- It is not recommended that this number is changed. Changes to this parameter

- can cause unexpected results.
- It is important to write down this value before making changes to be sure you can return to the factory programming if unexpected results occur. Each machine may have a different value as it is set individually.

Display

Operating Procedure

94.4 00:00  
95.5 95.1 SB

9 Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.




WARNING



THE COFFEE BOILER CONTAINS WATER AT ELEVATED TEMPERATURES.  
WATER TEMPERATURE OVER 52°C CAN CAUSE SEVERE BURNS INSTANTLY OR DEATH FROM SCALDING.

## “Technical” Programming

### Steam Boiler

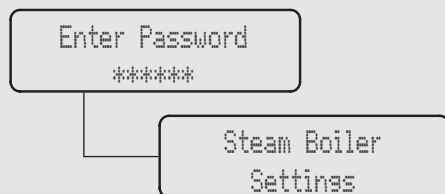

### Description

- This parameter enables the technician to set various parameters of the steam boiler.
- The temperature of saturated water is proportional to the pressure inside the Steam Boiler. Therefore it is possible to regulate the pressure of the steam boiler by means of electronic temperature control. Please use the following tables as reference when setting the steam boiler temperature.

Temperature	Pressure
247°F/119°C	1.0 bar
260°F/127°C	1.5 bar
264°F/129°C	2.0 bar

Display	Operating Procedure
<div>Enter Password *****</div>	<b>1</b> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Steam Boiler Settings</div>	<b>2</b> Press the T3 button to enter the menu.
<div>Steam Boiler ENABLED</div>	<b>3</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>ENABLED</b> or <b>DISABLED</b> , press the T3 button to confirm the option.
<div>Steam Temp. 123,7°C 123,5°C</div>	<b>4</b> Press the T3 button to enter the menu, move with the buttons T1 and T2 to set the desired temperature, press the T3 button to confirm the value.

Steam Boiler

Description

Enter Password  
\*\*\*\*\*

Steam Boiler  
Settings


- The parameter filling WITH PUMP allows the technician to select the activation of the water pump during the automatic filling cycle of the service boiler.
- Only under unusual circumstances would the option of “WITHOUT PUMP” be chosen.
- The electronics installed in this espresso machine give priority to the brew boiler for pressure. The activation of the auto-fill cycle during the brewing

- process can reduce the overall dispensing pressure in the brew boiler.
- During the auto-fill cycle, if a brew cycle is chosen, the auto-fill cycle is delayed until all brew cycles are complete.
  - The maximum permitted value for the temperature setting is 129°C.
  - SAFETY TEST allows to bring the steam boiler temperature to 140°C, thus triggering the safety valve. Once the

Display	Operating Procedure
Autofill Delay 2 start 2 stop	5 The first value indicates the time in seconds between the detection of the need to fill and the start of filling. The second value indicates the time in seconds between filling and its actual end. Press the T3 button to enter the menu, move with the buttons T1 and T2 to set the desired automatic filling time, press the T3 button to confirm the value.
Fill During Brew YES	6 Press the T3 button to enter the menu, move using the buttons T1 and T2 to select YES or NO, press the T3 button to confirm the option.
Autofill Timeout 10 min	7 Press the T3 button to enter the menu, move with the buttons T1 and T2 to set the desired time, press the T3 button to confirm the value.
Fill With Pump WITH PUMP	8 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select WITH PUMP or WITHOUT PUMP, press the T3 button to confirm the option.

## “Technical” Programming

### Steam Boiler

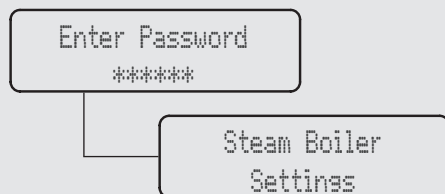

### Description

valve has triggered disable the function.

- Should the safety valve fail to trigger within approximately one minute of the temperature reaching 140°C, disable the function and replace the valve.
- Only qualified technicians can perform this operation.
- DRAIN STEAM BOILER allows the service staff to renew or “regenerate” the water contained inside the steam

boiler, discharging about one half of the water contained in the boiler.

- This procedure is recommended in case the machine should remain inactive for more than 8 hours and in any case at least on a weekly basis.

Display	Operating Procedure
<div>Level Sensitiv. HIGH</div>	<b>9</b> Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select HIGH, MEDIUM or LOW, press the T3 button to confirm the option.
<div>Steam Boiler Safety Test</div>	<b>10</b> Press the T3 button to enable the function.
<div>Safety Test 127.0/140.0°C</div>	<b>11</b> Press the T3 button to exit the function.
<div>Drain Steam Boiler</div>	<b>12</b> Press the T3 button to enable the function.
<div>Close Water Valve Enter when Ready</div>	Manually close the mixing valve to allow the drain of the water contained in the steam boiler.

Steam Boiler

Description

Enter Password  
\*\*\*\*\*

Steam Boiler  
Settings

Display	Operating Procedure
Press Water Button Enter when Empty	Press the hot water button to start draining the water contained in the steam boiler. Press the T3 button when the boiler is empty, wait for refilling completion.
Wait for Steam Boiler Autofill	
Reset Water Valve Enter when Done	
Drain Steam Boiler Completed	
Steam Boiler Exit	<p>13 Press the T3 button to return to the “Technical” programming.</p> <p>14 Press T1 or T2 to continue with the programming of the other parameters.</p>

## “Technical” Programming

### Steam Boiler

### Description

Enter Password  
\*\*\*\*\*

Steam Boiler  
Settings

Display	Operating Procedure
<div>Menu Press B3 to Exit</div> <div>94.4 00:00 95.5 95.1 SB</div>	<p><b>15</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</p> <p><b>16</b> Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</p>



### WARNING



THE STEAM BOILER CONTAINS WATER AT ELEVATED TEMPERATURES.  
WATER TEMPERATURE OVER 52°C CAN CAUSE SEVERE BURNS INSTANTLY OR DEATH FROM SCALDING.

Steam Boiler

Description

- The parameter “Level Sensit.” allows the technician to select the probe sensitivity for steam boiler filling according to water hardness.
- The black connection cable corresponds to the working level probe.
- The red connection cable corresponds to the minimum level probe.
- The sensitivity default value is high.

Enter Password  
\*\*\*\*\*

Steam Boiler  
Settings


Display	Operating Procedure
Enter Password *****	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
Steam Boiler Settings	2 Press the T3 button to enter the menu.
Level Sensitiv. HIGH	3 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select HIGH, MEDIUM or LOW, press the T3 button to confirm the option.
Steam Boiler Exit	4 To exit the submenu move between the parameters using the buttons T1 and T2 until the exit submenu is displayed. Press the T3 button to exit the submenu.

# “Technical” Programming

## Steam Boiler

### Description

- The parameter “Level Sensit.” allows the technician to select the probe sensitivity for steam boiler filling according to water hardness.
- The black connection cable corresponds to the working level probe.
- The red connection cable corresponds to the minimum level probe.
- The sensitivity default value is high.

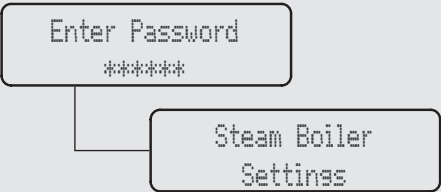


Display	Operating Procedure
<div>Menu Press B3 to Exit</div> <div>Restart Machine for Changes</div> <div></div> <div>94.4 00:00 95.5 95.1 SB</div>	<div>5 To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu.</div> <div>6 Turn the Main Switch to the 0 position.</div> <div>7 Now it is possible to turn on again the espresso machine; set the main switch to position 1 and press any button to complete machine switch on.</div>



Pre-Infusion or Pre-Brewing

Description

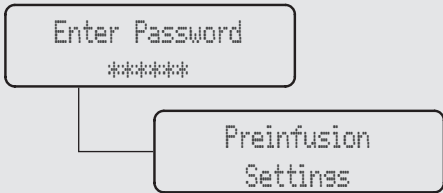

- This parameter allows the operator to program the time of pre-brewing of water with the coffee. Each group can have a different programming.
- Pre-brewing has only two values to be adjusted for each group. The time (in seconds) for which the brewing valve is open during the pre-brewing cycle and the time (in seconds) for which the brewing valve is closed during the


pre-brewing cycle; during this time the pump is active. Once the pre-brewing cycle is over, the normal brewing cycle will continue until the end.

- For an espresso machine composed of three groups, they are identified as Group 1, Group 2 and Group 3.

Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Preinfusion Settings</div>	2 Press the T3 button to enter the menu.
<div>G1 Preinfusion BY BUTTON</div>	3 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select BY BUTTON or BY GROUP, press the T3 button to confirm the option.
<div>Group 1 Pre-Inf 0s Wet</div> <div>Group 1 Pre-Inf 0s Hold</div>	4 Press T1 or T2 to select the group whose parameters you want to set. By pressing the T3 button the first value will blink. Use the buttons T1 and T2 to reach the value that you want to set, press T3 button to confirm. Repeat this operation to set the second value.

## “Technical” Programming

### Pre-Infusion or Pre-Brewing

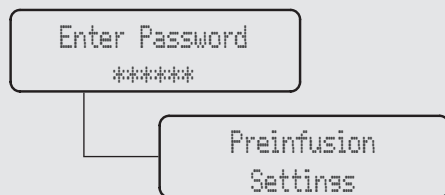

### Description

- This parameter allows the operator to program the time of pre-brewing of water with the coffee. Each group can have a different programming.
- Pre-brewing has only two values to be adjusted for each group. The time (in seconds) for which the brewing valve is open during the pre-brewing cycle and the time (in seconds) for which the brewing valve is closed during the

pre-brewing cycle; during this time the pump is active. Once the pre-brewing cycle is over, the normal brewing cycle will continue until the end.


- For an espresso machine composed of three groups, they are identified as Group 1, Group 2 and Group 3.

Display	Operating Procedure
<div>Preinfusion Exit</div>	<p><b>5</b> To exit the submenu move between the parameters using the buttons T1 and T2 until the exit submenu is displayed. Press the T3 button to exit the submenu.</p>
	<p><b>6</b> Press T1 or T2 to continue with the programming of the other parameters.</p>
<div>Menu Press B3 to Exit</div>	<p><b>7</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</p>
<div>94.4 00:00 95.5 95.1 SB</div>	<p><b>8</b> Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</p>

Cup Warmer

Description


- This parameter allows the technician to enable or disable the cups heating function.
- This parameter allows the technician to adjust the operating time of the resistance for the heating of the cups.
- This parameter allows the technician to select the operating of the cup warmer by time or by button on the control panel.
- This function is displayed only on the models of espresso machine equipped with this accessory.

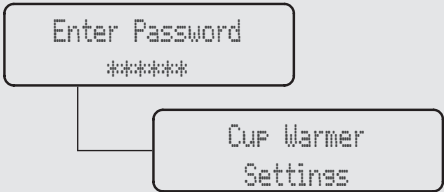

Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Cup Warmer Settings</div>	2 Press the T3 button to enter the menu.
<div>Cup Warmer TIME</div>	3 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select TIME or BY BUTTON , press the T3 button to confirm the option.
<div>Cup Warmer T On 2min</div> <div>Cup Warmer T Off 8min</div>	4 Press the T3 button to enter the menu, move between the parameters with the buttons T1 and T2 to set the desired time, press the T3 button to confirm the value.

## “Technical” Programming

### Cup Warmer

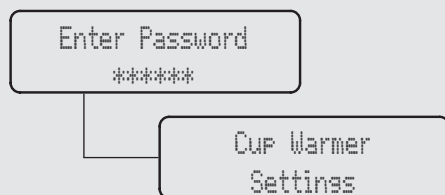

### Description


- This parameter allows the technician to enable or disable the cups heating function.
- This parameter allows the technician to adjust the operating time of the resistance for the heating of the cups.
- This parameter allows the technician to select the operating of the cup warmer by time or by button on the control panel.
- This function is displayed only on the models of espresso machine equipped with this accessory.

Display	Operating Procedure
<div>Cup Warmer Exit</div>	<p><b>5</b> To exit the submenu move between the parameters using the buttons T1 and T2 until the exit submenu is displayed. Press the T3 button to exit the submenu.</p>
<div>Menu Press B3 to Exit</div>	<p><b>6</b> Press T1 or T2 to continue with the programming of the other parameters.</p> <p><b>7</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</p>
<div>94.4 00:00 95.5 95.1 SB</div>	<p><b>8</b> Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</p>

Auto ON/OFF

Description

- This parameter allows the technician to program the espresso machine to turn on at a preset time and turn off at a preset time.
- This feature also allows the espresso machine to remain in the off condition for one repeating closed day.

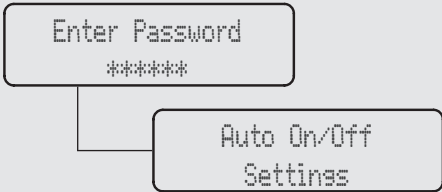


Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Auto On/Off Settings</div>	2 Press the T3 button to enter the menu.
<div>Auto On/Off ENABLED</div>	3 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>ENABLED</b> or <b>DISABLED</b> , press the T3 button to confirm the option.
<div>Auto On Time 00:00</div>	4 If the parameter is enabled, press the T3 button to enter the menu, move with the buttons T1 and T2 to set the desired time, press the T3 button to confirm the value.

# “Technical” Programming

## Auto ON/OFF

### Description

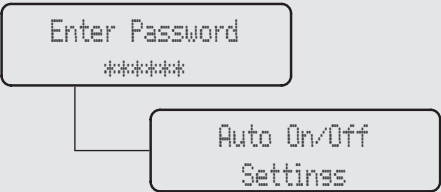

- This parameter allows the technician to program the espresso machine to turn on at a preset time and turn off at a preset time.
- This feature also allows the espresso machine to remain in the off condition for one repeating closed day.

Display	Operating Procedure
Auto Off Time 00:00	5 Press the T3 button to enter the menu, move with the buttons T1 and T2 to set the desired time, press the T3 button to confirm the value.
Closed On NEVER	6 Press the T3 button to enter the menu, move with the buttons T1 and T2 to select an option, press the T3 button to confirm the option.
Auto On/Off Exit	7 To exit the submenu move between the parameters using the buttons T1 and T2 until the exit submenu is displayed. Press the T3 button to exit the submenu.
	8 Press T1 or T2 to continue with the programming of the other parameters.

Auto ON/OFF

Description

- This parameter allows the technician to program the espresso machine to turn on at a preset time and turn off at a preset time.
- This feature also allows the espresso machine to remain in the off condition for one repeating closed day.

Enter Password  
\*\*\*\*\*

Auto On/Off  
Settings


Display	Operating Procedure
<div>Menu Press B3 to Exit</div>	<div>9</div> <div>To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</div>
<div>94.4      00:00 95.5   95.1   SB</div>	<div>10</div> <div>Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</div>

## “Technical” Programming

### Calendar

### Description

- This parameter allows the user to set the day, month and year.

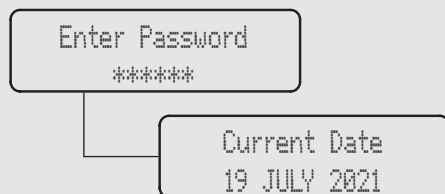

Display	Operating Procedure
<div>Enter Password *****</div>	<b>1</b> After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Current Date 19 JULY 2021</div>	<b>2</b> Pressing the T3 button the first value will blink. Use the buttons T1 and T2 to set the date. Repeat the operation to set the month and year.  <b>3</b> Press T1 or T2 to continue with the programming of the other parameters.
<div>Menu Press B3 to Exit</div>	<b>4</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.



Clock Adjust

Description

- This parameter allows the user to set the time of day and the day of the week.
- This parameter is used to display time and is also used by the “Auto On/Off” parameter
- There are 4 changeable values within this parameter:
  - Hour;
  - Minute;
  - Day of week;
  - Hour Format 12h or 24h.

Enter Password  
\*\*\*\*\*

Clock Time  
00:00 SUNDAY

Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Clock Time 00:00 SUNDAY</div>	2 Pressing the T3 button the first value will blink. Use the buttons T1 and T2 to set the clock. Repeat the operation to set the day of the week.
	3 Press T1 or T2 to continue with the programming of the other parameters.
<div>Menu Press B3 to Exit</div>	4 To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.

## “Technical” Programming

### Clock Adjust

Enter Password  
\*\*\*\*\*

Clock Time  
00:00 SUNDAY

### Description

- This parameter allows the user to set the time of day and the day of the week.
- This parameter is used to display time and is also used by the “Auto On/Off” parameter
- There are 4 changeable values within this parameter:
  - Hour;
  - Minute;
  - Day of week;
  - Hour Format 12h or 24h.

Display	Operating Procedure
<div> <div>94.4 00:00</div> <div>95.5 95.1 SB</div> </div>	<p><b>5</b> Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</p>

ECO Mode

Description

- This parameter allows the technician to set up a temperature to be maintained in case of a temporary non utilization of the espresso machine.
- It is possible to set this parameter also during the normal operation of the machine by pressing T1 and T2 at the same time.


Enter Password  
\*\*\*\*\*

Eco Mode  
Settings

Display	Operating Procedure
Enter Password *****	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
Eco Mode Settings	2 Press the T3 button to enter the menu.
Eco Mode Temp -10.0°C	3 Press the T3 button to enter the menu, move between the parameters with the buttons T1 and T2 to set the desired temperature, press the T3 button to confirm the value.
Auto Eco Time 30	4 Press the T3 button to enter the menu, move between the parameters with the buttons T1 and T2 to set the desired time (in minutes), press the T3 button to confirm the value. A value of “0” (zero) disables the Eco Mode parameter.

# “Technical” Programming

## ECO Mode

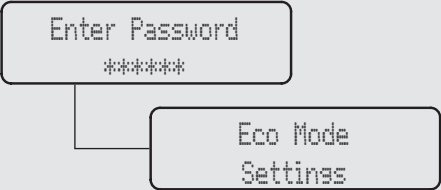

### Description

- This parameter allows the technician to set up a temperature to be maintained in case of a temporary non utilization of the espresso machine.
- It is possible to set this parameter also during the normal operation of the machine by pressing T1 and T2 at the same time.

Display	Operating Procedure
	<b>5</b> To exit the submenu move between the parameters using the buttons T1 and T2 until the exit submenu is displayed. Press the T3 button to exit the submenu.
	<b>6</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.
	<b>7</b> Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.

Filter Alarm

Description

- This parameter enables the technician to program an alarm that will alert the user about the need for maintenance or replacement of the water filter.
- Once the set volume has been reached, the error message “Filter Alarm” will be displayed.
- A value of 0 (zero) disables the filter alarm parameter.
- This feature can be enabled or disabled.



Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Filter Alarm Settings</div>	2 Press the T3 button to enter the menu.
<div>Filter Alarm ENABLED</div>	3 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>ENABLED</b> or <b>DISABLED</b> , press the T3 button to confirm the option.
<div>Filter Status 0 of 5000L</div>	4 Press the T3 button to enter the menu, move between the parameters with the buttons T1 and T2 to set the desired value, press the T3 button to confirm the value.

# “Technical” Programming

## Filter Alarm



### Description

- This parameter enables the technician to program an alarm that will alert the user about the need for maintenance or replacement of the water filter.
- Once the set volume has been reached, the error message “Filter Alarm” will be displayed.
- A value of 0 (zero) disables the filter alarm parameter.
- This feature can be enabled or disabled.

Display	Operating Procedure
Alarm Water Use 40 Coffee Water	5 Press the T3 button to enter the menu, move between the parameters with the buttons T1 and T2 to set the desired value, press the T3 button to confirm the value.
Filter Alarm Reset (0 L)	6 Press the T3 button to enter the menu, move between the parameters with the buttons T1 and T2 to set the desired value, press the T3 button to confirm the value.
Filter Alarm Exit	7 To exit the submenu move between the parameters using the buttons T1 and T2 until the exit submenu is displayed. Press the T3 button to exit the submenu.
	8 Press T1 or T2 to continue with the programming of the other parameters.

Filter Alarm

Description

- This parameter enables the technician to program an alarm that will alert the user about the need for maintenance or replacement of the water filter.
- Once the set volume has been reached, the error message “Filter Alarm” will be displayed.
- A value of 0 (zero) disables the filter alarm parameter.
- This feature can be enabled or disabled.


Enter Password  
\*\*\*\*\*

Filter Alarm  
Settings

Display	Operating Procedure
<div>Menu Press B3 to Exit</div>	<div>9 To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</div>
<div>94.4 00:00 95.5 95.1 SB</div>	<div>10 Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</div>

# “Technical” Programming

## Dose Counter

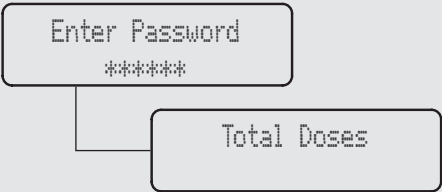

### Description

- This parameter allows the technician to review the total doses dispensed for each button.
- This parameter displays different values:
  - Total steaming doses;
  - Total purges doses;
  - Total small doses;
  - Total medium doses;
  - Total large doses.

Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Coffee Dose Settings</div>	2 Press the T3 button to enter the menu.
<div>Total Coffee Doses: 63</div>	3 Move between the parameters using the buttons T1 and T2 to display the desired option.
<div>61 Doses 10</div>	4 Continuing to move with the buttons T1 and T2 you can display the total doses of each button.



Coffee Dose Counter

Description

- This parameter allows the technician to review the total doses dispensed for each button.
- This parameter displays different values:
  - Total coffee doses;
  - Coffee doses for each button;
  - Hot water doses.

Enter Password  
\*\*\*\*\*

Coffee Dose  
Settings

Display	Operating Procedure
<div>Water Doses 30</div>	<div>5</div> <div>Continuing to move with the buttons T1 and T2 you can also display the total doses of the hot water button.</div>
<div>Coffee Dose Exit</div>	<div>6</div> <div>To exit the submenu move between the parameters using the buttons T1 and T2 until the exit submenu is displayed. Press the T3 button to exit the submenu.</div> <div>7</div> <div>Press T1 or T2 to continue with the programming of the other parameters.</div>
<div>Menu Press B3 to Exit</div>	<div>8</div> <div>To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</div>

# “Technical” Programming

## Coffee Dose Counter

### Description

- This parameter allows the technician to review the total doses dispensed for each button.
- This parameter displays different values:
  - Total coffee doses;
  - Coffee doses for each button;
  - Hot water doses.

Enter Password  
\*\*\*\*\*

Coffee Dose  
Settings

Display	Operating Procedure
<div>94.4 00:00</div> <div>95.5 95.1 SB</div>	<div>9</div> <div>Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</div>

Electronics

Description

- This parameter allows the technician to display the hardware and firmware version for all the electronic boards installed on the espresso machine.

Enter Password  
\*\*\*\*\*

Electronics  
Settings


Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Electronics Settings</div>	2 Press the T3 button to enter the menu.
<div>Force FW Upgrade ENABLED</div>	3 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select ENABLED or DISABLED, press the T3 button to confirm the option.
<div>Button Board HW3</div>	4 Using the buttons T1 and T2 to display the hardware and firmware version for the Button Board.

# “Technical” Programming

## Electronics

### Description

- This parameter allows the technician to display the hardware and firmware version for all the electronic boards installed on the espresso machine.

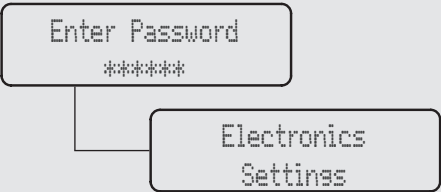

Display	Operating Procedure
<div>24V Universal HW0 FW0.6.0</div>	<b>5</b> Using the buttons T1 and T2 to display the hardware and firmware version for the Universal Board.
<div>G1 Scale HW3.0 FW2.7.3</div>	<b>6</b> Using the buttons T1 and T2 to display the hardware and firmware version for the Scale.
<div>BLE Chip FW0.1.0</div>	<b>7</b> Using the buttons T1 and T2 to display the hardware and firmware version for the Bluetooth. (if present)
<div>Electronics Exit</div>	<b>8</b> To exit the submenu move between the parameters using the buttons T1 and T2 until the exit submenu is displayed. Press the T3 button to exit the submenu.

Electronics

Description

- This parameter allows the technician to display the hardware and firmware version for all the electronic boards installed on the espresso machine.

Enter Password  
\*\*\*\*\*

Electronics  
Settings


Display	Operating Procedure
	<p>9 Press T1 or T2 to continue with the programming of the other parameters.</p>
<p>Menu Press B3 to Exit</p>	<p>10 To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</p>
<p>94.4 00:00 95.5 95.1 SB</p>	<p>11 Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</p>

# “Technical” Programming

## Water Quality

### Description

- This parameter allows the operator to view the TDS and water hardness values that are measured by the water probe at the inlet of the coffee machine.

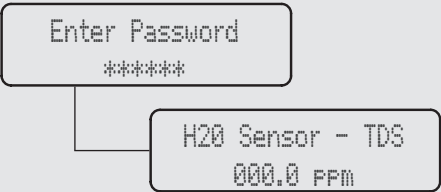

Display	Operating Procedure
	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
	2 Using the buttons T1 and T2 to display the TDS value.
	3 To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.
	4 Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.

Water Quality

Description

- This parameter allows the operator to view the TDS and water hardness values that are measured by the water probe at the inlet of the coffee machine.

Enter Password  
\*\*\*\*\*

Total Hardness  
000.0 PPM

Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Total Hardness 000.0 PPM</div>	2 Using the buttons T1 and T2 to display the Total Hardness value.
<div>Menu Press B3 to Exit</div>	3 To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.
<div>94.4 00:00 95.5 95.1 SB</div>	4 Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.

# “Technical” Programming

## Gateway

### Description

- This parameter allows the operator to connect the coffee machine to the WiFi connection.



Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Configure Gateway</div>	2 Press the T3 button to enter the menu.
<div>Gateway Unlocked Press B3 to Exit</div>	3 The Gateway is ready to connect to the WiFi network.
<div>94.4 00:00 95.5 95.1 SB</div>	4 Press T2 and T3 at the same time to exit the programming mode and return to the normal use of the espresso machine.



Save and Load USB

Description

- This parameter allows the technician to load some guide profiles from the USB pendrive.

Enter Password  
\*\*\*\*\*

Save and Load USB  
Settings


Display	Operating Procedure
Enter Password *****	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
Save and Load USB Settings	2 Press the T3 button to enter the menu.
Load Settings From USB	3 Press the T3 button to enter the menu.
Insert USB Key Enter to Exit	4 Insert the USB Pendrive into the USB port and press the T3 button.
Loading Settings...	

# “Technical” Programming

## Save and Load USB

### Description

- This parameter allows the technician to load some guide profiles from the USB pendrive.

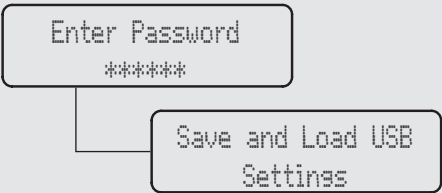

Display	Operating Procedure
<div>Settings Successfully Loaded</div>	5 Confirmation message: all settings have been successfully loaded.
<div>Save Barista Settings to USB</div>	6 Press the T3 button to enter the menu.
<div>Insert USB Key Enter to Exit</div> <div>Saving Settings...</div>	7 Insert the USB Pendrive into the USB port and press the T3 button.
<div>Settings Successfully Saved</div>	8 Confirmation message: all settings have been successfully saved.

Save and Load USB

Description

- This parameter allows the technician to load some guide profiles from the USB pendrive.

Enter Password  
\*\*\*\*\*

Save and Load USB  
Settings


Display	Operating Procedure
<div>Save Technician Settings to USB</div>	9 Press the T3 button to enter the menu.
<div>Insert USB Key Enter to Exit</div> <div>Saving Settings...</div>	10 Insert the USB Pendrive into the USB port and press the T3 button.
<div>Settings Successfully Saved</div>	11 Confirmation message: all settings have been successfully saved
<div>Electronics Exit</div>	12 To exit the submenu move between the parameters using the buttons T1 and T2 until the exit submenu is displayed. Press the T3 button to exit the submenu.

# “Technical” Programming

## Save and Load USB

### Description

- This parameter allows the technician to load some guide profiles from the USB pendrive.

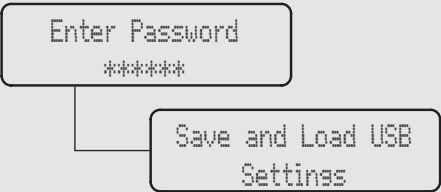


Display	Operating Procedure
	<b>13</b> Press T1 or T2 to continue with the programming of the other parameters.
<div>Menu Press B3 to Exit</div>	<b>14</b> To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.
<div>94.4 00:00 95.5 95.1 SB</div>	<b>15</b> Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.

Reset

Description

- This parameter allows the technician to reset all the values returning to initial factory settings.
- It is possible to reset the settings you made in the “Barista” programming or the settings you made in the “Technical” programming.

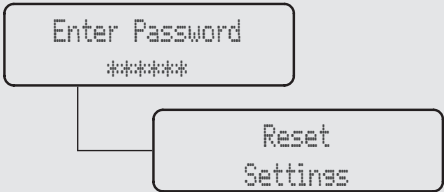

Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Reset Settings</div>	2 Press the T3 button to enter the menu.
<div>Barista Settings Reset</div>	3 Press the T3 button to reset the settings you made in the “Barista” programming.
<div>Tech. Settings Reset</div>	4 Press the T3 button to reset the settings you made in the “Technical” programming.

# “Technical” Programming

## Reset



### Description

- This parameter allows the technician to reset all the values returning to initial factory settings.
- It is possible to reset the settings you made in the “Barista” programming or the settings you made in the “Technical” programming.

Display	Operating Procedure
<div>Reset Exit</div>	<div>5</div> <div>To exit the submenu move between the parameters using the buttons T1 and T2 until the exit submenu is displayed. Press the T3 button to exit the submenu.</div>
<div>Menu Press B3 to Exit</div>	<div>6</div> <div>Press T1 or T2 to continue with the programming of the other parameters.</div> <div>7</div> <div>To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.</div>
<div>94.4 00:00 95.5 95.1 SB</div>	<div>8</div> <div>Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.</div>

First Startup

Description

- This parameter allows the technician to enable/disable first startup procedure.


Enter Password  
\*\*\*\*\*

First Startup  
ENABLED

Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>First Startup ENABLED</div>	2 Press the T3 button to enter the menu, move between the parameters using the buttons T1 and T2 to select <b>ENABLED</b> or <b>DISABLED</b> , press the T3 button to confirm the option.
<div>Menu Press B3 to Exit</div>	3 To exit the menu move between the parameters using the buttons T1 and T2 until the exit menu is displayed. Press the T3 button to exit the menu and return to the normal use of the espresso machine.
<div>94.4 00:00 95.5 95.1 SB</div>	4 Alternatively, you can exit the “Technical” programming and return to the normal use of the espresso machine by pressing T2 and T3 at the same time.

# “Technical” Programming

## Update Firmware

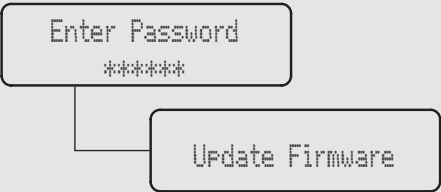

### Description

- This parameter allows the technician to update the control unit of the espresso machine via a USB Pendrive.

Display	Operating Procedure
<div>Enter Password *****</div>	1 After accessing the “Technical” programming menu and entering the password, use the buttons T1 and T2 until the following screen is displayed.
<div>Update Firmware</div>	2 Press the T3 button to update the firmware. The following screen will immediately appear.
<div>Insert USB Key And Press Enter</div>	3 Insert the USB Pendrive into the USB port and press the T3 button.
<div>OFF 00:00</div>	4 When the update is over, the espresso machine restarts. Set the switch to 0 (zero) and then again to 1.



Exit Menu

Description

- This parameter allows the technician to exit the “Technical” programming and return to the normal use of the espresso machine.

Enter Password  
\*\*\*\*\*

Menu  
Press B3 to Exit

Display	Operating Procedure
<p>Menu Press B3 to Exit</p>	<p>1 Press the T3 button to exit the “Technical” programming and return to the normal use of the espresso machine.</p>

